

INSTALLATION INSTRUCTIONS

6" RIOT HEAT SHIELD, SATIN BLACK

3563

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Heat Shield
- 2 2-1/2" Worm Drive Clamp

YOU WILL ALSO NEED:

Flat head screw driver

PICTURES SHOWN ARE OF THE SILVER PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

WARNING INSTALLATION REQUIRES CONTACT WITH THE ENGINE AND EXHAUST SYSTEM; ENSURE THAT THEY HAVE FULLY COOLED BEFORE BEGINNING TO PREVENT INJURY.


STEP 2 Locate provided Heat Shield. Determine and test fit placement of the heat shield on the exhaust system.

STEP 3 Refer to PIC 2. Locate provided two (2) Worm Drive Clamps. Fasten clamps around the test fitted area on the exhaust system. Tighten the clamps so they are just loose enough to be able to move around.

Tip: Fasten the clamps so the fastener's head is positioned behind the exhaust system, and pointing down towards the ground, so you can easily access and adjust it.

STEP 4 Refer to PIC 3 through 5. Slide one notch, located on the backside of the Heat Shield, underneath one of the clamps. Adjust shield and clamp into desired final position. Tighten the clamp to secure it in place.

STEP 5 Slide the other clamp into the notch, located on the backside of the other side of the shield. Tighten the clamp to secure the shield in place.

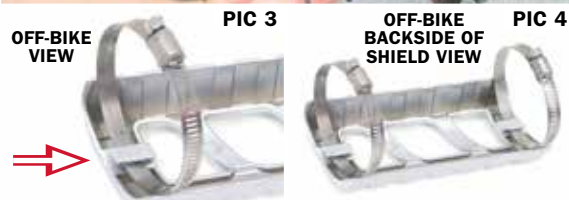

INSTALLATION INSTRUCTIONS

6" RIOT HEAT SHIELD, SATIN BLACK

3563

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

