



FLAME SPEAKER GRILLS

3788

FITS: '96 & UP ELECTRA GLIDE AND '06 & UP STREET GLIDE

PARTS INCLUDED

- 2 Flame Speaker Accents
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE

CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR

SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein


can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein

may negatively affect product performance and functionality.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

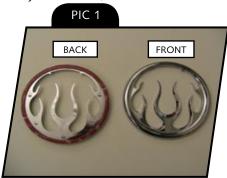

STEP 2 Using the back of your fingernail, rub the backing of the adhesive pad on the accent to activate the catalyst. Remove the backing from the adhesive pad.

STEP 3 Center the accent over the speaker then press and hold the emblem in place for one (1) minute. Full bonding strength will occur in 24 hours.

STEP 4 Repeat process for opposite side.



ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

Ride On!

PAGE 2

ZOMBIE SPEAKER GRILLS

INSTALLATION

Küryakyn