



LOUVERED BATTERY BOX SIDE COVER 3913

FITS: ALL '01-UP GL 1800 MODELS

PARTS INCLUDED

- 1 Right Side Cover
- 1 Left Side Cover
- 2 Light Mounts
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Phillips screwdriver.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the right side cover (PIC. 1) and set on a soft/clean towel or rag.

STEP 3 Remove the three screws as shown in PIC. 2; they will be used again.

-cont.-

PIC. 1



STEP 4 Place the louver cover on the side cover and secure using the three screws (PIC. 3) that were removed in STEP 3.

STEP 5 Reinstall the cover on the bike.

STEP 6 Repeat STEP 2 through STEP 5 for the left side.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

OPTIONAL STEPS TO INSTALL THE LIGHT MOUNT

STEP 1 The light mount can be mounted in any clean, dry location either on the louvered panel or on the motorcycle; to enhance the placement of lizard lights.

STEP 2 Clean the installation area with and included alcohol-cleaning pad and allow to dry.

STEP 3 Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst.

STEP 4 Remove the backing and press and hold in place for one minute, full bonding strength will occur in 24 hours.


Ride On!

Kuryakyn[®]

PIC. 2



PIC. 3

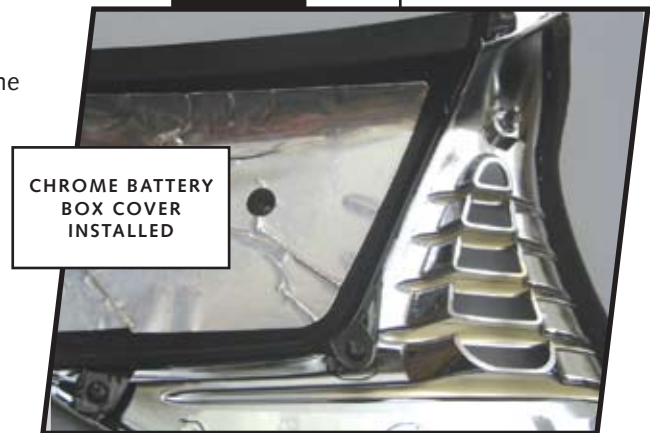

PAGE

2

LOUVERED BATTERY BOX SIDE COVER

INSTALLATION