



## ISO BRAKE PEDAL PAD

4025

### PARTS INCLUDED

- 1 Chrome Pedal Top Half
- 1 Chrome Pedal Bottom Half
- 1 Large Rubber Insert
- 1 Small Rubber Insert
- 2 Socket Head Cap Screw #8-32 x .313"
- 2 Setscrew #10-32 x .250"
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED


Set of Hex Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** See PIC 1. Start the set screws in the Locations marked "1" and "4". Place the bottom cover half in position under the brake pedal. PIC 2 Tighten the set screw marked "1".

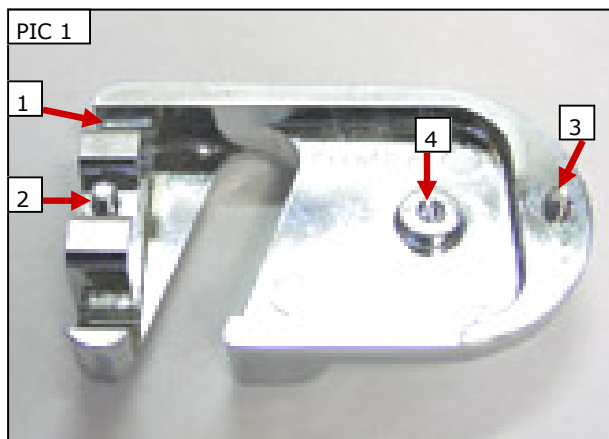


-cont.-

**STEP 3** Set the top half of the cover into place. Secure the top and bottom halves together with the two #8-32" socket head cap screws marked "2" and "3". PIC 1

**STEP 4** Snug the remaining set screw marked "4". PIC 1

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

PIC 2

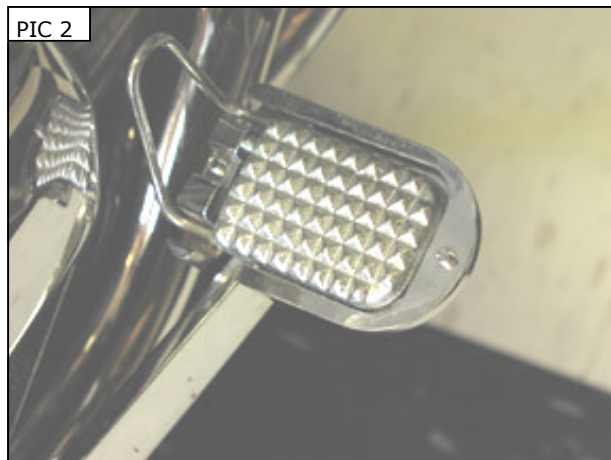

**STEP 5** Thoroughly clean the recessed surfaces of the brake pedal pad, and affix the two rubber pads by peeling off the backing and firmly holding them into position for one full minute. Full bonding will occur in 24 hours.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

*Ride On!*

PAGE

**2**

**ISO BRAKE PEDAL PAD**

**INSTALLATION**