



**KINETIC BRAKE PEDAL PAD**

**4310**




**PARTS INCLUDED**

- 1 Kinetic Brake Pedal Pad Assembly
- 1 5/16" Fender Washer
- 1 5/16" Lock Washer
- 1 5/16" Acorn Nut
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

 <b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
 <b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>
 <b>CAUTION</b>	<b>This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.</b>


 **IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.**

**TOOLS SUGGESTED**

Set of Hex Wrenches, Set of Combination Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

 **YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.**

**-cont.-**




**STEP 2** Remove the stock brake pedal pad. PIC 1

**STEP 3** Insert the stud on the back of the Kinetic Brake Pedal Pad through the large hole in the brake arm. Center the Kinetic Pad on the brake arm. PIC 2

**STEP 4** Place the included flat washer on the Kinetic Pad stud, then the lock washer. Thread the included acorn nut onto the stud. While firmly holding the rubber pad and chrome base in place (so they don't shift), tighten the acorn nut securely. PIC 3

**CAUTION** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

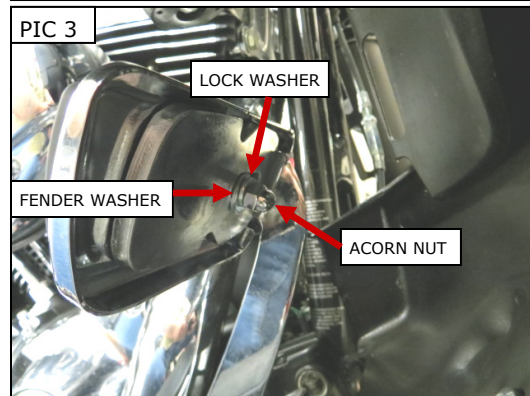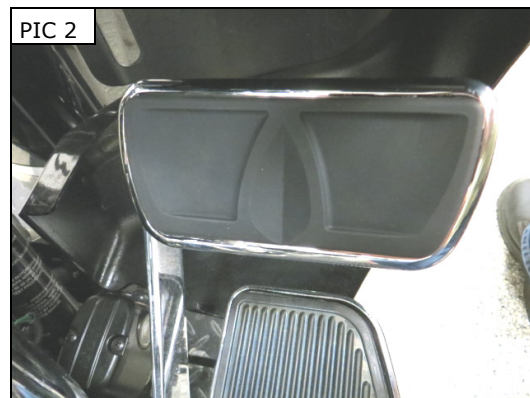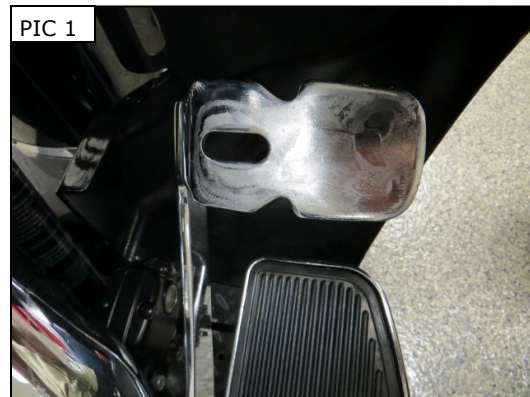

*Ride On!*

**PAGE  
2**

**KINETIC BRAKE PEDAL PAD**

**INSTALLATION**