



PREMIUM DRIVER AND PASSENGER FLOORBOARDS

4351

- Fits: Most motorcycles – Mounting Components Sold Separately**
- Installation on Metric Cruisers required model specific Splined Adapters.
 - Installation in passenger location on H-D Softail models requires model specific Floorboard Mount Kit.
 - Installation on other H-D models in place of male mount footpegs requires Non-Pivoting Male Mounts, P/N 8883.
 - When installed with Kuryakyn Retractable Passenger Pegs, P/N 4352, no additional adapters or mounting kits are required.

PARTS INCLUDED

- | | |
|---|--------------------------------------|
| 2 | Floorboard Assemblies |
| 2 | 5/16"-18 x 1" Socket Head Cap Screws |
| 2 | Flat Washers |
| 1 | Installation Instructions |

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! Placing these floorboards on mounts intended for footpegs may prohibit them from folding up in the same manner as the stock peg. Also, if the board is positioned so it will fold up as stock, the trailing end of the board may be in a position that could limit cornering clearance.

-cont.-


ATTENTION! The floorboard may be rotated on the mount for a comfortable foot position, however, some angles may cause the board to contact other components on the bike before the board is folded up completely. Before installing, be aware of components on the bike that may interfere with the placement of the floorboards.

NOTE: The floorboards can be used in either the driver or passenger footpeg positions; be sure there is adequate clearance for the floorboards to fold up and that they do not interfere with the proper operation of any other components.

STEP 2 Remove the stock footpegs; save the stock fasteners.

STEP 3 Install the splined adapters (sold separately) onto the footpeg mounts using the stock hardware. Refer to the specific instructions included with the splined adapters.

STEP 4 As shown in PIC 1, the Floorboards have 5 different mounting positions. Test fit the Floorboard to the installed splined adapter in each of the 5 positions, decide which position is the most comfortable and provides necessary clearance for surrounding components.

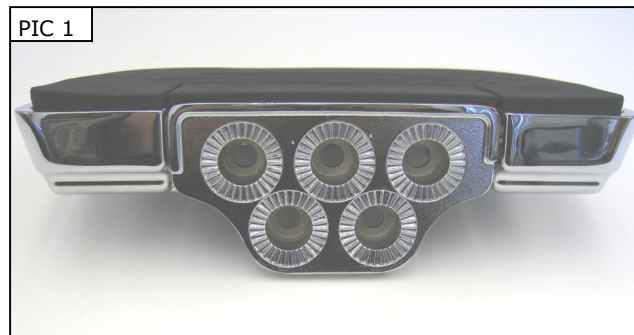

NOTE: Make sure to test that the floorboard can be folded up and out of the way when installed.

STEP 5 Install the 5/16"-18 x 1" Socket Head Cap Screw, with a Flat Washer behind the head, and finger tighten the Floorboard in place. The Floorboard can rotate to fine-tune the angle of the board for best fit.

STEP 6 Once you are finished adjusting the Floorboard, tighten the fastener from Step 5 securely.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Ride On!

PAGE
2

PREMIUM FLOORBOARDS

INSTALLATION