



## ZOMBIE PEGS—MALE MOUNT

4470

### PARTS INCLUDED

- 2 Zombie Pegs with Male Mounts
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

#### **WARNING**

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

#### **NOTICE**

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

#### **NOTICE**

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

### TOOLS SUGGESTED

Set of Combination Wrenches, Set of Hex Wrenches, Deep Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

#### STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

#### **WARNING**

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

#### **WARNING**

A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

**NOTE:** All photos were taken of the bottom of the peg to show location of fasteners.

**STEP 2** Before you install these pegs you need to check to make sure all fasteners are tight. These fasteners are shown in PIC 1, PIC 2, and PIC 3.

**STEP 3** Remove the stock peg from the clevis. Pay attention to any spacers or washers installed between the male mount and the clevis, it may be helpful later. Set this hardware aside, it will be reused.

**STEP 4** Install the new peg using any spacers or washers removed in Step 3. Line up the new peg mount hole with the hole in the clevis.

**STEP 5** Secure the peg in the clevis using the OEM hardware removed in Step 3. Check that the peg is installed correctly and is able to fold upward.

**WARNING** FOOTPEGS MUST BE INSTALLED SO THEY WILL FOLD UPWARD AND REARWARD IF HIT BY ANY OBJECT. FAILURE TO ADJUST THE FOOTPEGS TO OPERATE IN THIS MANNER COULD RESULT IN SERIOUS INJURY OR DEATH.




**STEP 6** PIC.4 shows the socket wrench and the fastener that is used to secure the adapter to the end of the peg. At this time loosen this fastener. Rotate the peg to your desired position. You can now secure the peg by tightening the end fastener shown in PIC.4.

**WARNING** CHECK TO MAKE SURE THAT THERE IS PROPER GROUND CLEARANCE WHEN CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR IF THE ZOMBIE PEG IS NOT POSITIONED PROPERLY. REPOSITION THE ZOMBIE PEG IF NECESSARY SO THAT THERE IS ADEQUATE CORNERING CLEARANCE.

**STEP 7** Tighten all hardware securely.

**STEP 8** Repeat Steps 2 through 7 for the other peg.

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

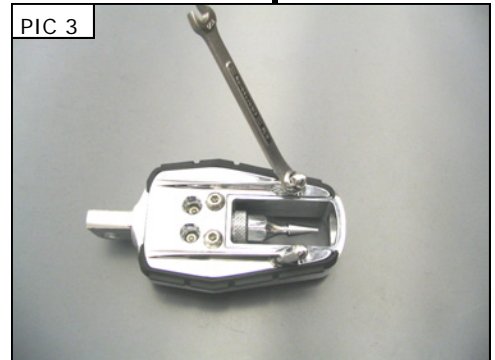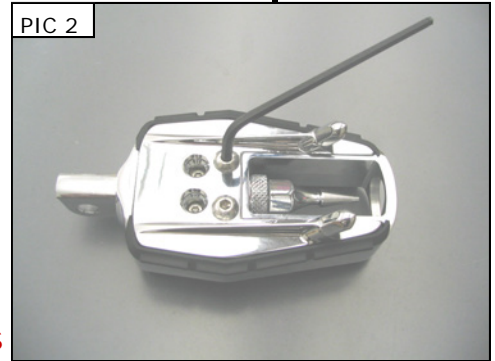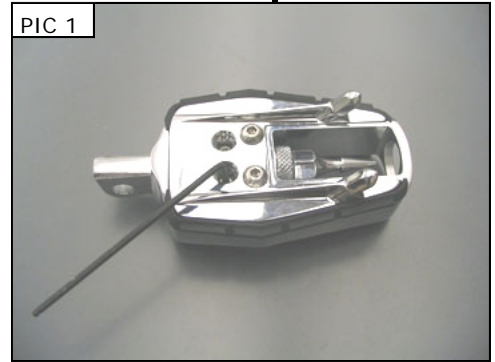

*Ride On!*