



**FOOTBOARD EXTENDERS**

**450**

**FITS: '92-UP ROAD KINGS AND DRESSERS. WILL NOT WORK ON MODELS EQUIPPED WITH H-D P/N 99002-97 – "CHROME DISPLAY STAND"**

**PARTS INCLUDED**

- 1 Spacer Plate — Six Holes
- 3 1/2" I.D. Round Spacer
- 2 5/16"-18 x 1-3/4" H.H.C.S. — Stainless Steel
- 3 1/2"-13 x 1-3/4" S.H.C.S. — Stainless Steel
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**PLEASE NOTE**

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

**TOOLS SUGGESTED**

1/2" Combination and socket wrenches, 3/8" Allen wrench, Bike lift, or blocks to hold bike upright without kickstand

**PROCEDURE**

**STEP 1** Place the bike on a suitable stand, or block the bike up securely so the kickstand will not be required.

**RIGHT SIDE:**

**STEP 2** Remove the footboard with the mounting brackets as a unit. A 3/8" Allen wrench or Allen socket will be required. Remove the large split lock washers from the stock bolts and set them aside as they will be re-used.


**STEP 3** Find two 1/2"-13 x 1-3/4" socket head cap screws and round spacers from the hardware kit. Place one of the stock 1/2" I.D. split lock washers on each of the new longer Allen bolts. Insert these bolts where the shorter ones were removed, and install one spacer on each of these new bolts. See [PIC.1](#).

**STEP 4** Reinstall the footboard assembly on the new bolts with the spacers in place. Adjust the height as you desire. Tighten securely.

**LEFT SIDE:**

**STEP 5** Remove the left side footboard assembly with the brackets intact. Save the stock split lock washers and nuts — they will be re-used.

-cont.-

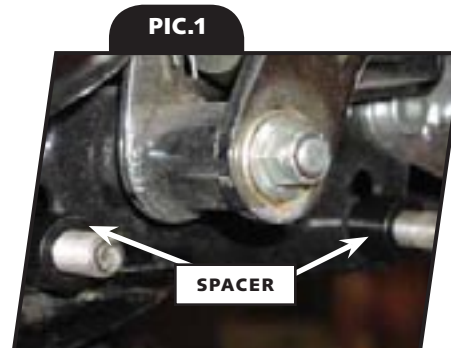

**STEP 6** See [PIC.2](#). Replace the original 1/2"-13 Allen bolt with one of the new longer ones included. The stock split lock washer will be re-used. Place the remaining spacer on this bolt as shown.

**STEP 7** See [PIC.3](#). Position the spacer plate as shown using the included 5/16"-18 x 1-3/4" hex head bolts and stock split lock washers, installed from the rear with the threads facing outward.


**STEP 8** Reinstall the footboard and bracket assembly in the same manner as it was removed. The stock 5/16" nut will be re-used. Adjust as desired. Tighten securely.

**NOTE** On some models, the 5/16"-18 x 1-3/4" hex heads bolt, stock split washer will be installed from the outside. See [PIC.4](#).

*Ride On!*

**Kuryakyn**

**PIC.2**

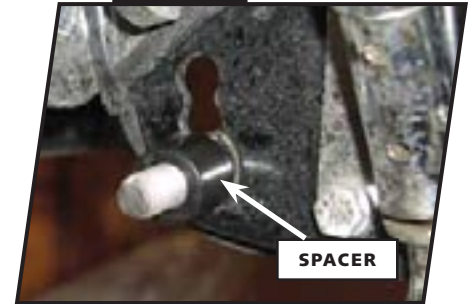

**PIC.4**



**PIC.3**



**PAGE**

**2**

**FOOTBOARD EXTENDERS** **INSTALLATION**