



2" ADJUSTABLE LOCKABLE OFFSETS 4556

THE OFFSETS CAN BE USED TO REPOSITION ANY H-D STYLE MALE-MOUNT FOOTPEGS; EITHER PASSENGER PEGS OR HIGHWAY PEGS.

PART #	INCLUDED
304556	2 2" Adjustable Lockable Offsets with Male Mount
	1 Hardware Kit, including:
	2 5/16" Chrome Hot Spots
	2 3/8" Chrome Hot Spots
	2 Anti-Seize Compound
	1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED


Allen wrenches, combination wrenches, or socket set depending on your configuration.

WARNING! The Adjustable Lockable Offsets are not compatible with any footpeg mounts fastened to the motorcycle with only a single fastener. Leverage applied to the mount by the offset arm will cause the mount to "twist" and loosen from the motorcycle. Do not use the Adjustable Lockable Offsets with any stock passenger peg mounts on FXR, '03 – earlier XL, or Softtail models. FAILURE TO HEED THIS WARNING MAY CAUSE SERIOUS INJURIES OR DEATH!

PROCEDURE

STEP 1 Determine if your footpeg mounts are compatible with the adjustable lockable offsets. See PIC.1 and PIC.2.

-cont.-

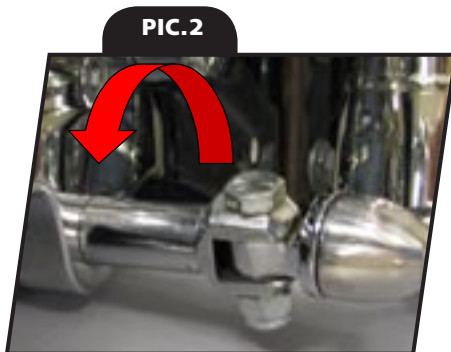

DANGER! THIS TYPE OF FOOTPEG MOUNT WILL "TWIST" AND LOOSEN THE FASTENER SECURING IT TO THE MOTORCYCLE.



GOOD! THIS TYPE OF FOOTPEG MOUNT CANNOT "TWIST" AND LOOSEN THE FASTENER SECURING IT TO THE MOTORCYCLE.

STEP 2 Remove the existing footpegs; save the hardware for re-use.

STEP 3 Loosely assemble the components, using [PIC.3](#) as a guide.

STEP 4 Install the right and left assemblies into the footpeg mounts; re-use the saved stock hardware to fasten the pivot mount.



STEP 5 Adjust the position of the offset arm on the splined pivot mount then secure the fastener.

STEP 6 Adjust the position of the footpeg and the splined clevis. Remove the footpeg and adjust the clevis to the desired position; secure with the clevis fastener. Reinstall the footpeg and secure with the footpeg fastener. See [PIC.4](#).

NOTE Position the Spitfire Clevis so the peg mount stop is on the topside, regardless of which side the clevis is installed on the bike. (See [PIC.5](#))

STEP 7 Verify the position of the footpegs for comfort. Verify all fasteners are secure.

STEP 8 Install the Hot Spots. Install the 5/16" Hot Spots over the footpeg fastener heads; install the 3/8" Hot Spots over the clevis-to-footpeg fastener.

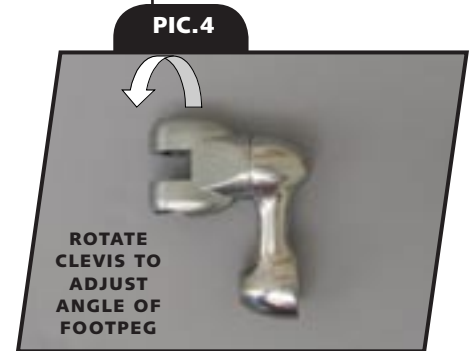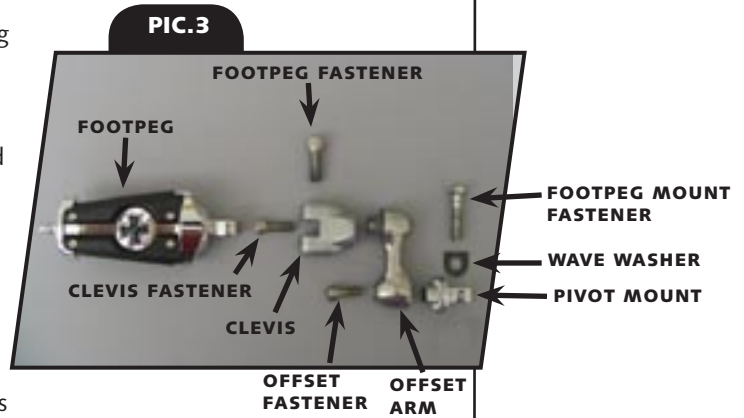

Ride On!

