



**ZOMBIE FLOORBOARD COVERS**

**4566**

**PARTS INCLUDED**

- 1 Right Side Flame Floorboard Cover
- 1 Left Side Flame Floorboard Cover
- 1 Hardware Kit Containing:
  - 8 Rubber Isolators
  - 8 1/4"-20 Shoulder Screws
  - 8 5/16" Flat Washers
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

**TOOLS SUGGESTED**


Set of Hex Wrenches, Flat Blade Screwdriver, IN/LBS Torque Wrench and Hex Socket Set

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**


- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

<b>WARNING</b>	<b>YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.</b>
----------------	---

**STEP 2** Starting with the right side, remove the footboard pad by gently pulling up on the rubber pad, and simultaneously pushing on the rubber darts protruding from the underside of the footboard with a flat blade screwdriver. PIC 1.

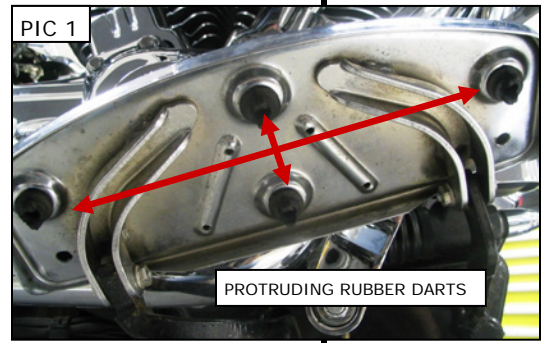


**STEP 3** Place four rubber isolator pads from the hardware kit in the recess in the floorboard pan so that the smooth side is facing down as shown in PIC 2.

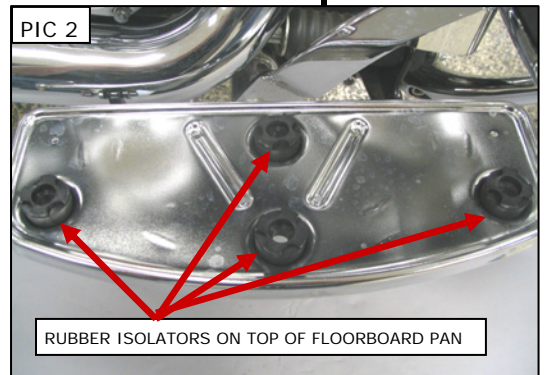

**STEP 4** Set the floorboard cover on the isolators, lining the holes up with the welded nuts on the bottom side of the cover.

**STEP 5** Secure the cover using four 1/4"-20 shoulder screws and four 5/16" flat washers from the hardware kit as shown in PIC 3, and **torque them to 72 IN/LBS.**

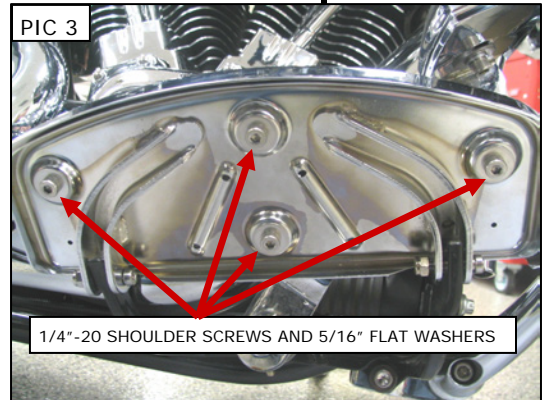

**STEP 6** Repeat STEP 2 through STEP 5 for the opposite side.

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.