

INSTALLATION INSTRUCTIONS

DRIVER FLOORBOARD RELOCATION BRACKETS FOR TOURING & TRIKE, CHROME

4069

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Left Front Bracket	1	Hardware Kit, containing:
1	Left Rear Bracket	4	Shoulder Bolts
1	Right Front Bracket	4	Lock Nuts
1	Right Rear Bracket		

YOU WILL ALSO NEED:

Hex wrench set, combo wrench set

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Refer to PIC 2. Starting on the left (clutch) side, remove the existing floorboards and hardware. Set floorboard and hardware aside, they will be reused.


Note: Pay attention to how the hardware is installed and how the floorboard is mounted. You will be reinstalling these items in reverse order in a later step.

STEP 3 Locate provided Left Front and Rear brackets, two (2) shoulder bolts, and (2) lock nuts.

Note: Refer to PIC 3. Take note of the stampings made on the inside of the brackets for assistance on determining sides.

*LF = Left Front (clutch side), LR = Left Rear (clutch side)
RF = Right Front (brake side), RR = Right Rear (brake side)*

STEP 4 Refer to PIC 4. Align and place the LF Bracket on the front floorboard mount, and the LR Bracket on the rear floorboard mount. Insert provided shoulder bolts, from the front-side of the bike, through the aligned mounting holes.

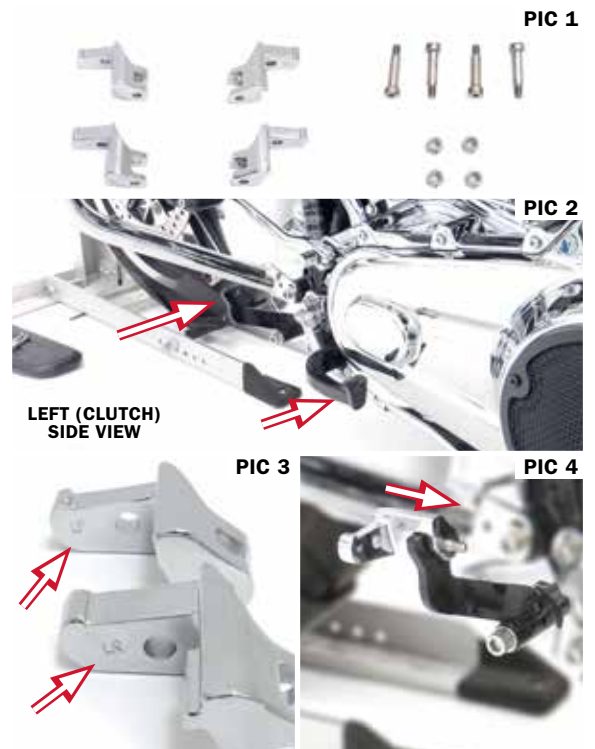

INSTALLATION INSTRUCTIONS

DRIVER FLOORBOARD RELOCATION BRACKETS FOR TOURING & TRIKE, CHROME

4069

-CONTINUED-

STEP 5 Refer to PIC 5. Fasten the brackets to the floorboard mounts using the provided Lock Nuts. Fully tighten hardware.

STEP 6 Refer to PIC 6. Locate the floorboard and hardware that was removed in Step 2. Install the floorboard to the relocation brackets in the reverse order of which it was removed. Fully tighten hardware.

STEP 7 Repeat steps 2 through 6 on the right (brake) side.

WARNING CHECK TO MAKE SURE THAT THERE IS PROPER CLEARANCE WHEN CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR WITHOUT PROPER CORNERING CLEARANCE.

NOTICE CHECK CLEARANCE FOR PROPER OPERATION OF CONTROLS. THE RELOCATOR BRACKETS PROVIDE MORE ROOM TO PLACE YOUR FEET/ NEW RIDING POSITIONS. CONFIRM CLEARANCE AND RELATION OF THE POSITION OF YOUR FEET TO THE SHIFTER AND THE BRAKE PEDALS.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 5



PIC 6



FINAL