

INSTALLATION INSTRUCTIONS

L.E.D. FAIRING VENT ACCENT, CHROME

5053

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|-------------------------------|---|---------------------------|
| 1 | L.E.D. Fairing Vent Light Kit | 1 | Hardware Kit, containing: |
| | | 1 | Front Accessory Adapter |
| | | 1 | Alcohol Pad |

YOU WILL ALSO NEED:

Hex and torque set, warm soapy water and a clean rag, masking tape

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

WARNING THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

NOTICE ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.
- STEP 3** Refer to Pic 1. Test fit the L.E.D. Fairing Vent Light. Use masking tape to make alignment marks; remove the light.
- STEP 4** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.



INSTALLATION INSTRUCTIONS

L.E.D. FAIRING VENT ACCENT, CHROME

5053

-CONTINUED-

- STEP 5** Route the vent light's wire through the vent hole of the outer fairing. Align the light and press it into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

NOTE: If the bike is going to be operated before full bonding occurs, secure the Accent to the fairing with a good quality masking or painter's tape.


- STEP 6** Carefully remove windshield and outer fairing from bike. Refer to your motorcycle's service manual for assistance.

- STEP 7** Refer to PIC 3. Locate the 2-pin accessory connector on upper corner of the brake-side (right) inner fairing. Locate and connect Front Accessory Adapter to 2-pin accessory connector.

- STEP 8** Refer to PIC 4. Locate and insert the male 3-pin connector from the L.E.D. Fairing Vent Light into the female connector of the Front Accessory Adapter.

- STEP 9** Reinstall the main fuse, turn the ignition on, and test for proper function of the lights. The L.E.D. Fairing Vent Accent is a running light. Turn ignition off.

- STEP 10** Reconnect the headlight and reinstall the outer fairing and windshield in the reverse order they were removed.

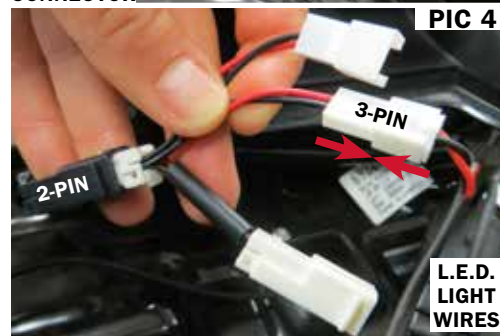

WARNING

VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE.

NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PREASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.