KURYAKYN

INSTALLATION INSTRUCTIONS

REAR MASTER CYLINDER COVER FOR INDIAN, CHROME

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
A CAUTION	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
NOTICE	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1 Rear Master Cylinder Cover

- 1 Hardware Kit, containing:
 - 2 M4 x .07 x 16 Socket Head Cap Screws

YOU WILL ALSO NEED:

Metric hex key set

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.





M4 X .07 X 16 SHCS

PIC 1


STEP 2 Refer to PIC 2 and 3. Remove existing rear master cylinder cover. Leave the gasket on the rear master cylinder reservoir, discard the cover and hardware.

Note: Check the gasket for any rips or cracks. Replace gasket it needed.

Note: Now would be a good time to check your break fluid. Refer to your motorcycle's service manual for assistance.

- **STEP 3** Refer to PIC 4. Locate provided Rear Master Cylinder Cover. Carefully place the cover over the rear master cylinder reservoir; be careful to not move the gasket out of place. Check that the holes are aligned for the cover, gasket, and reservoir.
- **STEP 4** Refer to PIC 4. Locate two (2) M4 x .07 x 16 Socket Head Cap Screws. Insert and fasten the screws into the top holes of the master cylinder cover. Fully tighten hardware.

TORQUE VALUE FOR REAR MASTER CYLINDER COVER: 13 IN-LBS (1.5 NM)

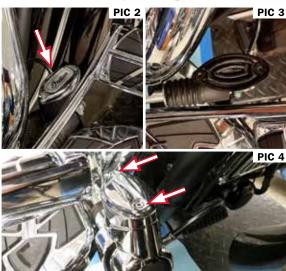

5180

KURYAKYN

INSTALLATION INSTRUCTIONS

REAR MASTER CYLINDER COVER FOR INDIAN, CHROME

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

