

## INSTALLATION INSTRUCTIONS

### ZOMBIE™ SADDLEBAG LATCH HANDLE, CHROME

5190

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Saddlebag Latch Handle
- 1 Right Saddlebag Latch Handle


#### YOU WILL ALSO NEED:

Torx Drivers Set

PICTURES SHOWN ARE OF THE BLACK PARTS. INSTALLATION OF THE CHROME PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2** Refer to PIC 2 and 3. Remove existing saddlebag latch and hardware. Set fastener and rubber grommet aside, they will be reused.
- Note: Refer to your motorcycle's service manual for additional assistance.*
- STEP 3** Locate provided Right Saddlebag Latch Handle (brake side). Locate the rubber grommet that was removed in step 2. Place rubber grommet onto the shaft of provided latch.
- STEP 4** Refer to PIC 4 and 5. Align and place the latch into the hole on the outside of the saddlebag cover.
- STEP 5** Fasten the latch to the saddlebag cover using the hardware that was removed in step 2.
- STEP 6** Repeat steps 2 through 5 for the opposite side.

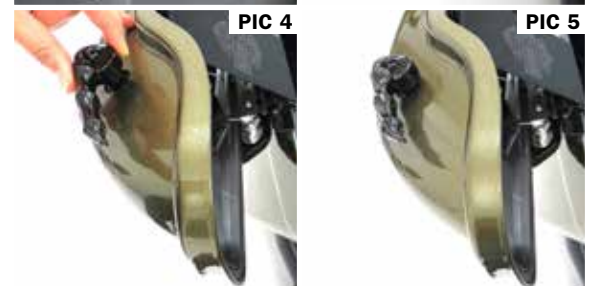

## INSTALLATION INSTRUCTIONS

### ZOMBIE™ SADDLEBAG LATCH HANDLE, CHROME

5190

-CONTINUED-

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

FINAL

