



PAD/FILLER FOR TOUR PAK RELOCATOR

5201

PARTS INCLUDED

- 1 Pad/Filler Panel
- 1 2" X 6" Adhesive Backed Hook Strip
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Clean the area between the back of the seat and the Tour Pak with soapy water and a clean rag; rinse and allow the area to dry completely PIC 1.



ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F. Rub the backing on the adhesive strip to activate the adhesive before applying.

STEP 3 Remove the backing from the Hook Strip and attach it vertically to the center of the Tour-Pak. PIC 1 Press firmly for one minute. Full bonding will occur in 24 hrs.

STEP 4 Install the pad and secure by attaching the Loop Strip on the pad to the Hook Strip applied to the Tour-Pak.

NOTE: This Pad is intended to fill the open area between the rear of the passenger seat and the Tour-Pak when using Kuryakyn's Tour-Pak relocater, P/N 8973. Depending on the location of the Tour-Pak, it may sit flat or be angled up.

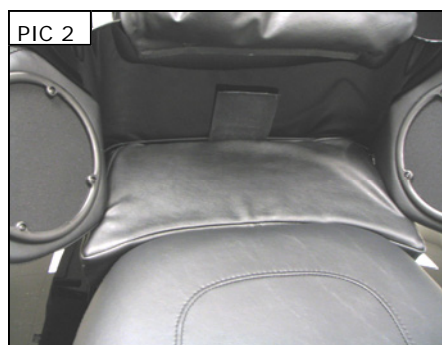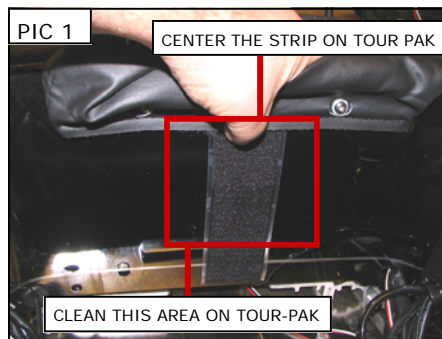

Ride On!