

## INSTALLATION INSTRUCTIONS

### L.E.D. ACCENT STRIP LIGHTS FOR '06-'09 STREET GLIDE, BLACK

5417

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |                           |   |                           |
|---|---------------------------|---|---------------------------|
| 1 | Right Accent Light        | 1 | Hardware Kit, containing: |
| 1 | Left Accent Light         | 2 | Alcohol Pad               |
| 1 | Run Turn Brake Controller | 2 | Dielectric Grease Pack    |
|   |                           | 8 | 6 Inch Cable Tie          |
|   |                           | 4 | Cord Keeper               |

#### YOU WILL ALSO NEED:

Phillips head screwdriver, warm soapy water and a clean rag

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.


**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.

**STEP 2** Remove the motorcycle's seat to gain access to the battery and rear lights wiring harness. Set the seat off to the side on a flat clean surface.

**STEP 3** Refer to PIC 2. Locate provided Run Turn Brake Controller. Disconnect the rear lights from the existing wiring harness. Apply a small amount of dielectric grease to each end of the controller connectors. Connect the controller to the bike's rear lights and wiring harness.

*Note: Refer to PIC 3. If you already have a preexisting R/T/B Controller (Kuryakyn PN-4612), be sure to fasten that controller to the rear lights and the newly provided R/T/B Controller. The newly provided controller connects to the preexisting controller and the motorcycle's power source wiring harness.*

**STEP 4** Refer to PIC 4. Locate the Left and Right Accent Lights. Connect the accents to the controller; the left accent to a "Left Output" connector and the right accent to a "Right Output" connector.

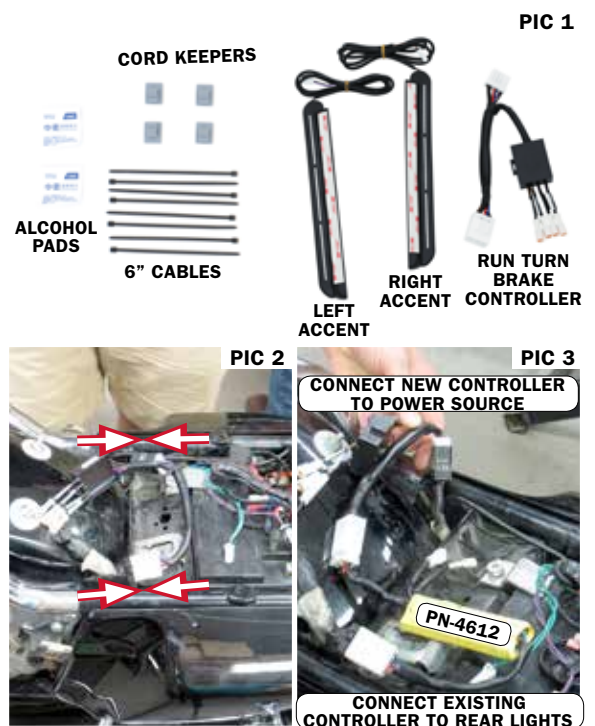

## INSTALLATION INSTRUCTIONS

### L.E.D. ACCENT STRIP LIGHTS FOR '06-'09 STREET GLIDE, BLACK

5417

-CONTINUED-

**STEP 5** Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect accents after operational testing. Set them aside for the time being. Remove main fuse.

**STEP 6** Refer to PIC 5. Remove existing saddlebags. Set the saddlebags off to the side on a flat clean surface.

*Note: The remaining photos shown are of a 2017 Street Glide, but installation process for 2006-2009 Street Glides will be the same.*

**STEP 7** Behind the extended rear fender filler panels, use warm soapy water and a clean rag to remove all dirt, debris, and adhesive from the installation area. Allow the area to dry completely.

Wipe the installation area with the included alcohol pads to remove any wax or polish; allow the area to dry completely.

**STEP 8** Refer to PIC 6. Test fit the provided Accent Lights. Use masking tape to make alignment marks; remove the accent.

*Note: Refer to PIC 7. Due of the curvature of the rear fender filler panel on 2006-2008 Street Glides the top section of the accent lights will not attach to them, and there will be a small gap present. Test fit the accent light, cut and remove the adhesive from the area on the light that does not touch the rear fender filler panel.*

**STEP 9** Refer to PIC 8. Route the wire between the saddlebag support and rear fender.

*Note: Be sure the accent's wire is not located in a position where it would pinch or cause damage to the wire.*

#### NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).




PIC 4



RIGHT (BRAKE) SIDE VIEW

PIC 5

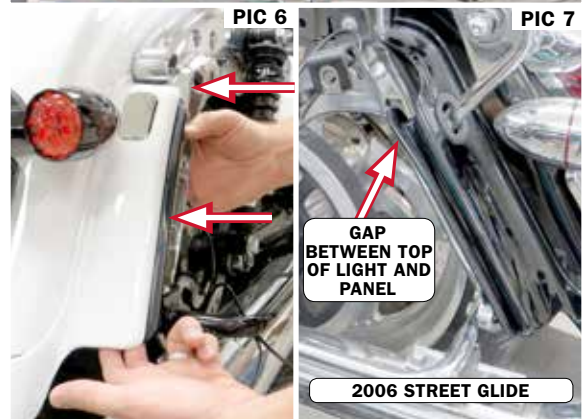

PIC 6

PIC 7

GAP BETWEEN TOP OF LIGHT AND PANEL

2006 STREET GLIDE



PIC 8

## INSTALLATION INSTRUCTIONS

### L.E.D. ACCENT STRIP LIGHTS FOR '06-'09 STREET GLIDE, BLACK

5417

-CONTINUED-

**STEP 10** Refer to PIC 9. Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing. Align the accent lights; press into place for one minute; full bonding will occur after 24 hours.


*Note: If the bike is going to be operated before full bonding occurs, secure the accent lights to the bike with a good quality masking or painter's tape.*



PIC 9

**STEP 11** Refer to PIC 10. Locate and apply a small amount of dielectric grease to each of the output connectors on the controller. Connect the accent light connectors to the controller; the left accent to a "Left Output" connector or the right accent to a "Right Output" connector.

*Note: There are two (2) Left and Right Outputs. The provided accents will use one (1) of each. The additional outputs are for connecting additional light products, or can be left unused.*

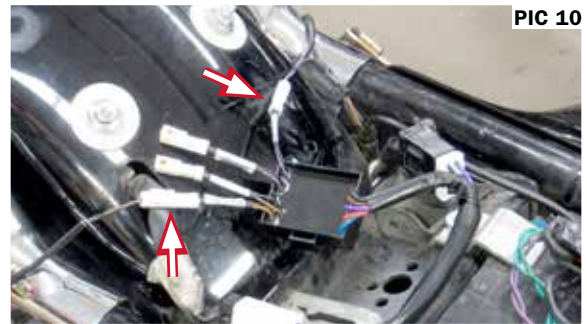


PIC 10

**STEP 12** Reinstall main fuse and retest lights for proper run/turn/brake operations.


**STEP 13** Refer to PIC 11 and 12. Use provided Cable Ties and Cord Keepers to fasten the accent's cord in and around the rear fender. Be sure to fasten the wires where they won't pinch, pull, or be damaged.

*Note: Fully clean all surface areas where mounts and cord keepers will be adhered to.*

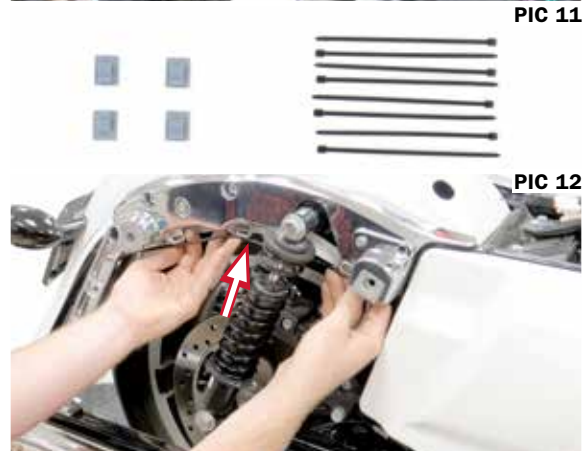

PIC 11

**STEP 14** Reinstall the saddlebags and the seat.

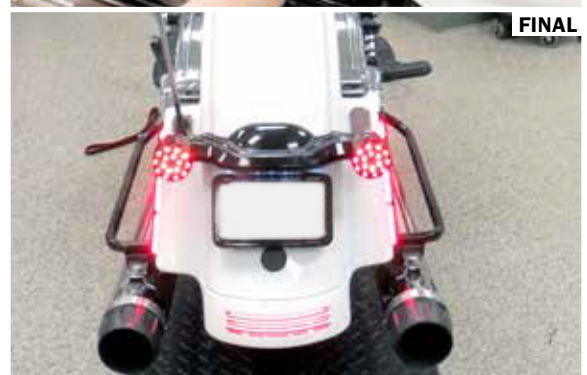

FINAL

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.