



## TURN SIGNAL TRIM for INDIAN CHIEFTAIN

5621

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

### NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Turn Signal Trim
- 1 Left Turn Signal Trim
- 1 Alcohol Pad
- 1 Installation instructions

### TOOLS SUGGESTED:

Warm soapy water and a clean rag, masking tape

### NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

### NOTICE

Ensure proper adhesion of this product. Remove all grease, oil, bugs, dirt and other debris (including wax and polish) from the installation area. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.


### BIKE PREP:

- STEP 2** Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.

- STEP 3** Test fit the Left Turn Signal Trim as shown in **PIC 1**. Use masking tape to make alignment marks; remove the Trim.

- STEP 4** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

- STEP 5** Using the marks made in **STEP 3**, align the Trim and press it into place for one minute; full bonding will occur after 24 hours. Repeat for the right side. Remove and discard the masking tape.

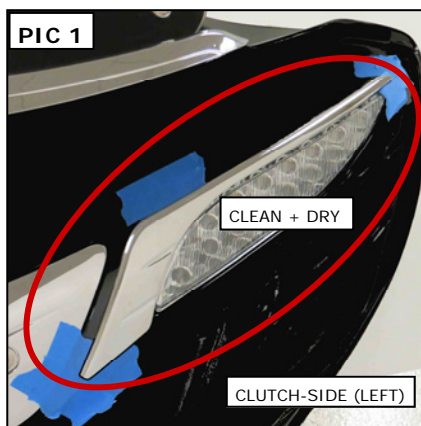

*Ride On!*