



DRIVING LIGHT BEZELS for CHIEFTAIN

5622

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Driving Light Bezel
- 1 Left Driving Light Bezel
- 1 Alcohol Pad
- 1 Installation instructions

TOOLS SUGGESTED:

Warm soapy water and a clean rag, masking tape, and marker

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTICE


Ensure proper adhesion of this product. Remove all grease, oil, bugs, dirt and other debris (including wax and polish) from the installation area. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.


STEP 2 Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation areas on both sides of the fairing; allow the areas to dry completely. Wipe the installation areas with the included alcohol pad to remove any wax or polish; allow the areas to dry completely.

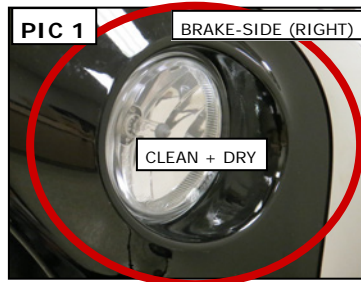

STEP 3 Refer to **PIC 2**. Determine the Left and Right Driving Light Bezel. The notch is in the topside.

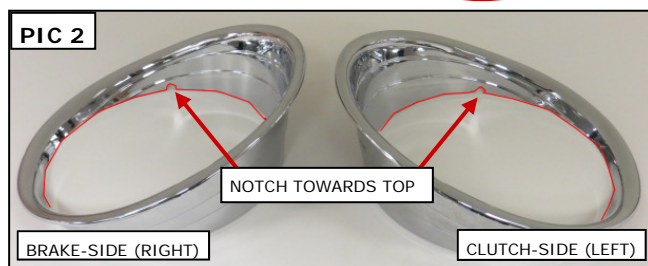

-cont.-

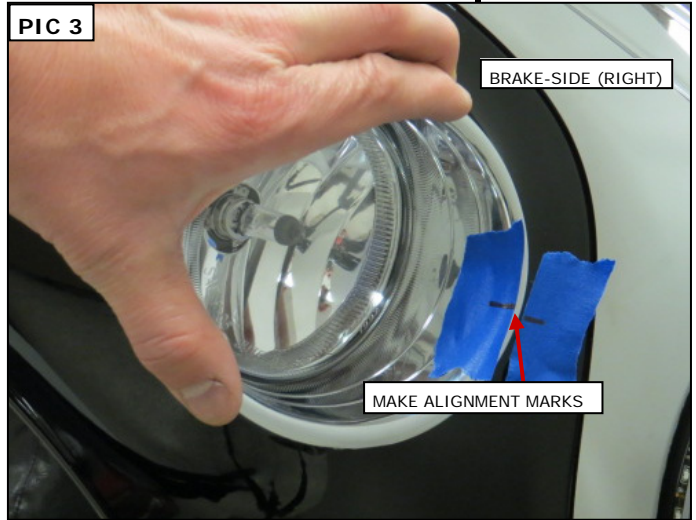

STEP 4 Position the Right Driving Light Bezel as shown in **PIC 3**. Use masking tape and a marker to make alignment marks; remove the Bezel.

STEP 5 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 6 Using the marks made in **STEP 4**, align the Bezel and press it into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

STEP 7 Repeat **STEPS 4 through 6** for the other side.

NOTICE

Ensure proper adhesion of this product. Remove all grease, oil, bugs, dirt and other debris (including wax and polish) from the installation area. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding **ONLY** occurs above 50° F.