





TAPPET BLOCK COVER for INDIAN

5641

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

 WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
 CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:


- 1 Tappet Block Cover for Indian
- 1 Installation Instructions

TOOLS SUGGESTED:

Set of metric hex wrenches, set of metric hex bits, in-lbs torque wrench

NOTICE	These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.
---------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the engine and exhaust system to cool.

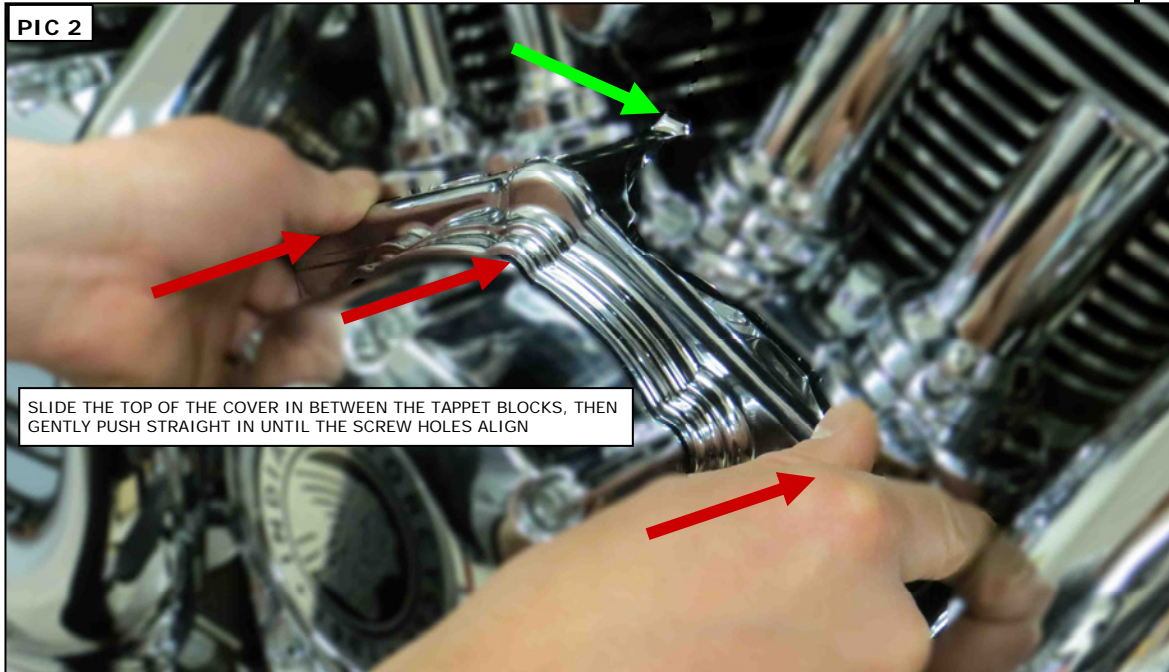
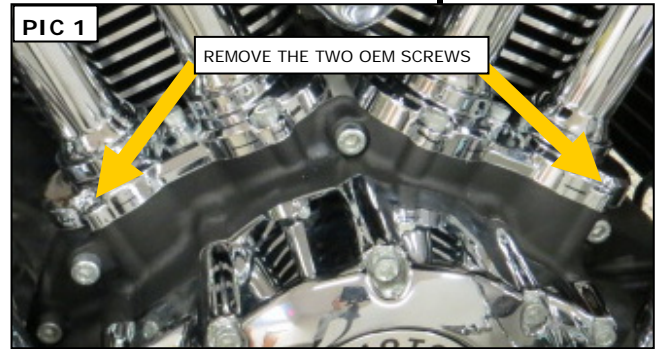
 WARNING	YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.
--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------

STEP 2 Refer to **PIC 1**. Remove the two OEM screws; set them aside, they will be reused.

STEP 3 Slide the top of the cover in between the tappet blocks, then rotate it down, and gently push it straight in until the screw holes align.

STEP 4 Secure the Cover to the tappet blocks with the screws from **STEP 2**. Leave the screws loose until both have been started in their threads.

STEP 5 Torque the screws to 85-115 in lbs (9.6-12.9 Nm).

**NOTICE**

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

*Ride On!***TAPPET BLOCK COVER for INDIAN****INSTALLATION**