



SADDLEBAG TOP TRIM

5670

Thank You For Choosing Kuryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Front Accent
- 1 Right Front Accent
- 1 Left Rear Accent
- 1 Right Rear Accent
- 2 Alcohol Pads
- 1 Installation Instructions

YOU WILL ALSO NEED:

Warm, soapy water and clean rag, masking or painter's tape, marker

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

STEP 2 Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation areas; allow the areas to dry completely.


Wipe the installation areas with the included alcohol pads to remove any wax or polish; allow the areas to dry completely.

STEP 3 Test fit the Accents as shown in **PIC 2**. "Hook" the bottom tip on the edge of the saddlebag; align the Accent with the existing lower trim. Rotate the Accent up into place; align it so the reveal is even. Use masking tape to make alignment marks; remove the Accents.

STEP 4 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 5 Align the Accents; press into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

STEP 6 Repeat for the other side.

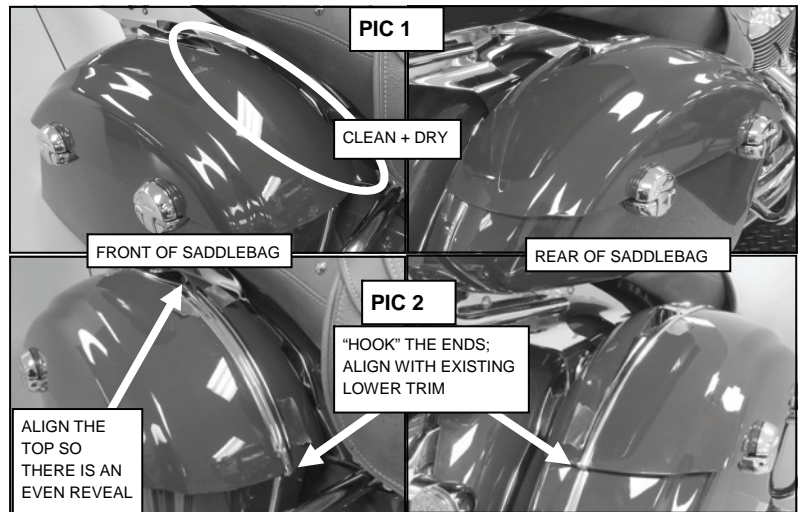

NOTE: If the bike is going to be operated before full bonding occurs, secure the Accent to the fairing with a good quality masking or painter's tape.