

## INSTALLATION INSTRUCTIONS

### SADDLE SHIELDS FOR SPORTSTER, REFLECTIVE SMOKE

5788

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |              |   |                                       |
|---|--------------|---|---------------------------------------|
| 1 | Left Shield  | 2 | 1/4-20 X 5/8" Button Socket Cap Screw |
| 1 | Right Shield | 2 | Alcohol Pad                           |

#### YOU WILL ALSO NEED:

Hex wrench set, combination wrench set, clean rag and warm soapy water

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**STEP 2** Refer to PIC 2. Remove existing seat, for ease of installation. Set it aside for now.

**STEP 3** Refer to PIC 3. Starting on the right (brake) side, remove existing hex bolt located below the gas tank rear mount. Set it aside, it will NOT be reused.


**NOTICE** ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

**STEP 4** Refer to PIC 3. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely.

Wipe the installation area with the included alcohol pads to remove any wax or polish; allow the area to dry completely.

**STEP 5** Locate provided Right Shield (brake side). Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

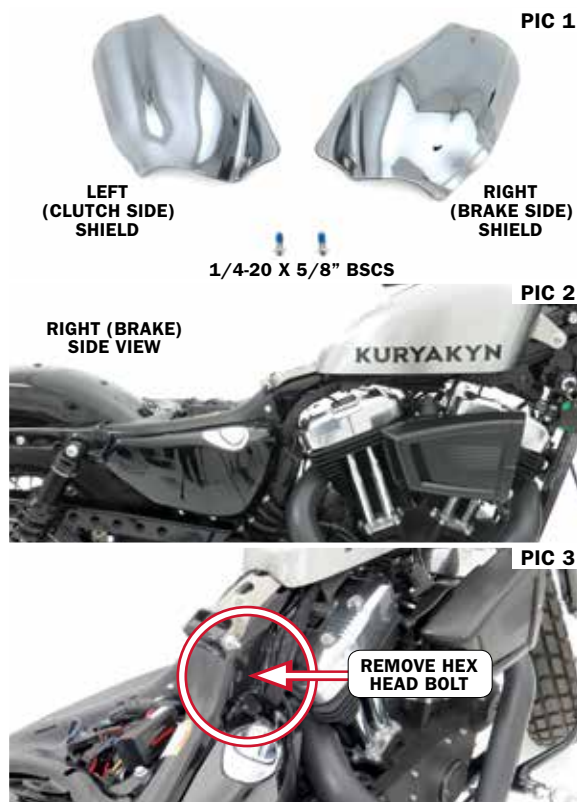

## INSTALLATION INSTRUCTIONS

### SADDLE SHIELDS FOR SPORTSTER, REFLECTIVE SMOKE

5788

-CONTINUED-

**STEP 6** Refer to PIC 4. Align the Right Shield's mounting hole with the bike frame where the hex bolt was removed in Step 3. Press into place for one minute; full bonding will occur after 24 hours.

**STEP 7** Refer to PIC 5. Locate provided one (1) screw. Insert the screw through the aligned mounting holes of the shield and bike frame. Hold the shield in the desired position and fully tighten hardware.

**STEP 8** Refer to PIC 6. Repeat Steps 3 through 7 for the left (clutch) side.

**STEP 9** Reinstall the seat.

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 4



PIC 5



PIC 6



FINAL