

INSTALLATION INSTRUCTIONS

PASSENGER BOARD MOUNTS FOR INDIAN® ROADMASTER

5831

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Mount
- 1 Right Mount
- 2 M10 X 1.5 X 30MM Socket Head Cap Screw

YOU WILL ALSO NEED:

Metric hex bits, ft-lbs (Nm) torque wrench, snap ring pliers, blue loctite

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2

Refer to PIC 1. Remove existing mounting hardware and passenger floorboard from the passenger floorboard mount. Be careful not to lose the two (2) detent balls and springs that are located between the floorboard and floorboard mount. Set hardware and floorboards aside, they will be reused.

STEP 3

Refer to PIC 3. Remove existing passenger floorboard mount from the motorcycle. Set it aside, it will NOT be reused.

STEP 4

Refer to PIC 4. Locate provided Passenger Board Mount and M10 X 1.5 X 30MM Socket Head Cap Screws. Apply a small amount of blue loctite to each screw.

*Note: Take note of the stampings made on the backside of each mount.
LH = Left Hand (clutch side)
RH = Right Hand (brake side)*

STEP 5

Align the provided mount with the mounting hole on the motorcycle. Secure it in place using the provided screw.

TORQUE VALUE FOR MOUNTING SCREW:
35 FT-LBS (47.5 Nm)



INSTALLATION INSTRUCTIONS

PASSENGER BOARD MOUNTS FOR INDIAN® ROADMASTER

5831

-CONTINUED-

STEP 6 Refer to PIC 5. Locate the OEM dedent balls and springs that were removed in Step 2. Place a spring into each hole located on the mount and place a dedent ball onto each of the springs.

STEP 7 Refer to PIC 6. Locate the passenger floorboard and mounting hardware that was removed in Step 2. Align the floorboard with the mount, being careful not to knock the dedent balls out of place. Secure it in place with the mounting hardware. Flip the passenger floorboard up and down to test for proper functionality.


STEP 8 Repeat Steps 2 through 7 on the opposite side.

NOTICE

THIS PART CAN BE USED WITH ADJUSTABLE PASSENGER PEGS PN-7059 OR PN-4353 (SOLD SEPARATELY). IF INSTALLING PN-7059 OR PN-4353, REFER TO THE INSTALLATION INSTRUCTIONS PROVIDED WITH THEM FOR INSTALLATION.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

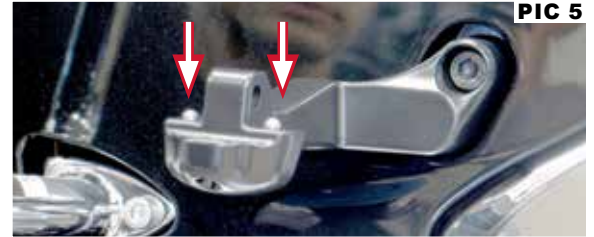

PIC 5



PIC 6



FINAL

FINAL
INSTALLATION
SHOWN WITH
PN-4353