



**THROTTLE ASSIST MATCHING BAR END WEIGHT 6288**

**FITS MODELS: INTENDED FOR USE WITH OEM OR KURYAKYN ISO, ISO-FLAME & TRANSFORMER GRIPS. REQUIRES A 7/8" HOLE IN GRIP END.**

**HONDA:** '96-'07 VLX600 SHADOW, '98-UP SHADOW 750 ACE/AERO/SPIRIT, '97-'07 SHADOW 1100 ACE/AERO/SABRE/SPIRIT, '94-'03 750 MAGNA, '03-UP VTX1300 (ALL MODELS), '02-'08 VTX1800 (ALL MODELS), '97-'04 VALKYRIE, '95-UP ST1100/ST-1300

**KAWASAKI:**

'06-UP VULCAN 900, '03-'08 VULCAN 1600 CLASSIC & MEAN STREAK

**SUZUKI:**

'97-UP BOULEVARD C/M/S50 & MARAUDER, '04-'08 INTRUDER 1400/S83, '98-UP INTRUDER 1500/C90

**VICTORY:**

'04-UP KINGPIN (WITH KÜRYAKYN ISO-GRIPS), '06-UP HAMMER (WITH KÜRYAKYN ISO-GRIPS), '04-UPVEGAS – ALL MODELS (WITH KÜRYAKYN ISO-GRIPS)

**YAMAHA:**

'98-UP V-STAR 650 CUSTOM & CLASSIC, '96-'00 ROYAL STAR

**HARLEY-DAVIDSON:**

ALL H-D MODELS WITH 1" OR 7/8" HANDLEBARS WITH HOLLOW BAR ENDS AND OEM OR KÜRYAKYN ISO®- & TRANSFORMER™ STYLE GRIPS (EXCEPT '08-UP TOURING MODELS WITH ELECTRONIC THROTTLE, HEATED GRIPS OR AIR RESERVOIRS IN HANDLEBARS.

**UNIVERSAL:**

FOR ALL MODELS WITH 7/8" OR 1" HOLLOW BARS WITH OPEN ENDS

**PARTS INCLUDED**

- 1 O-Ring
- 1 Bar End Weight
- 1 Threaded Wedge
- 3 Wedges
- 1 M6 x 1.0 x 90MM Socket Head Cap Screw (SHCS)
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

Set of Hex Wrenches, Razor Blade, 7/8" (or larger) Drill Bit (applications with closed grip ends)

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

## PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

### KURYAKYN GRIPS

**STEP 1** Remove the 4 bolts that hold the end cap to the end of the grip. (PIC 1)

**STEP 2** Loosen the bolt at the end of the Bar End Weight enough to get the assembly in to the hole. Insert the assembly in the end of the grip. (PIC 2)

**NOTE** If loosened too far, the end of the Bar End Weight will come off and components may be lost.

**STEP 3** Tighten the screw at the end of the Bar End weight until it does not spin in the end of the grip. Be careful not to over-tighten. (PIC 3)

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

### STOCK GRIPS

**STEP 1** Remove the bar ends and cut or drill at least a 7/8" (can be larger if necessary) hole in the end of the grip. (PIC 4)

**NOTE** Make sure that the cut area is smooth and free of any excess material. The grip should have adequate clearance to fit the Bar End Weight in the hole.

**STEP 2** Loosen the bolt at the end of the Bar End Weight enough to get the assembly in to the hole. Insert the assembly in the end of the grip

**NOTE** If loosened too far, the end of the Bar End Weight will come off and components may be lost.


**STEP 3** Test fit the Bar End Weight. It may be required to cut the grip material flush with the end of the grip sleeve/handlebar for best installation.

**STEP 4** Tighten the screw at the end of the Bar End weight until it does not spin in the end of the grip. Be careful not to over-tighten.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

*Ride On!*

PIC. 1

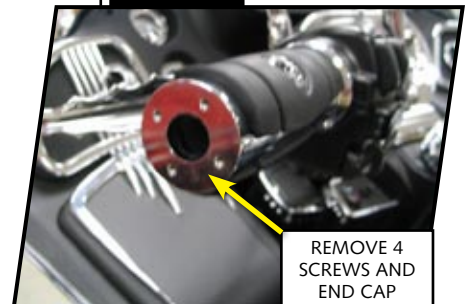


PIC. 2



PIC. 3



PIC. 4

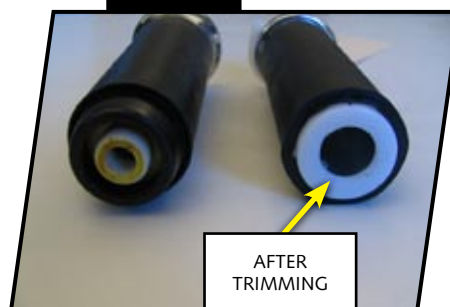

PAGE

2

**MATCHING BAR END WEIGHT** INSTALLATION