KURYAKYN

INSTALLATION INSTRUCTIONS

PRECISION REGULATOR COVER, CHROME

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
CAUTION	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
NOTICE	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1 Regulator Cover

1 Hardware Kit, containing:

2 1/4"-20 X 1" Socket Head Cap Screw

YOU WILL ALSO NEED:


Set of hex wrenches, set of hex bit sockets, in-lbs (Nm) torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- ▲ WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.
 - **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
 - **STEP 2** Refer to PIC 2. Remove the existing upper screws from the coolant downtube; set them aside they will NOT be reused.

STEP 3 Refer to PIC 2 and 3. Locate the provided Regulator Cover. Align and place the cover over the voltage regulator.

Note: If being installed with the Precision Oil Cooler Cover P/N 6417 or 6418 (sold separately), or Precision Coolant Pump Cover P/N 6414 or 6421 (sold separately), install that cover first before installing the regulator cover.

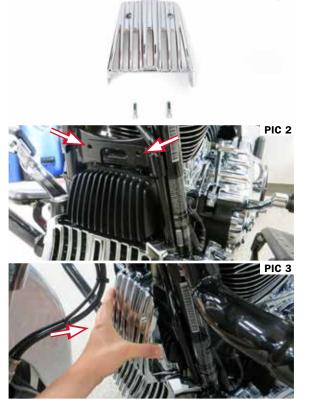

6427

PIC 1

KURYAKYN

INSTALLATION INSTRUCTIONS

PRECISION REGULATOR COVER, CHROME

-CONTINUED-

STEP 4 Refer to PIC 4. Locate two (2) provided Socket Head Cap Screws. Insert the screws through the regulator and coolant downtube upper mounting holes. Fully tighten hardware.

TORQUE VALUE FOR COOLANT DOWNTUBE LOWER SCREWS: 96-120 IN-LBS (10.8-13.6 NM)

