

INSTALLATION INSTRUCTIONS

PRECISION™ OIL LINE COVER, CHROME

6460

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1 Oil Line Cover

Hardware Kit, containing:

- 1 3/8-16 X 1-5/8" Socket Head Cap Screw
- 1 3/8" Flat Washer

YOU WILL ALSO NEED:

Set of hex wrenches, set of hex bit sockets, ft-lbs (Nm) torque wrench

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

Note: If installing with Tappet Block Cover (PN-6440 or 6410 - sold separately) or Transmission Shroud (PN-6456 or 6457 - sold separately), install the Tappet first, then the Oil Line Cover, followed by the Transmission Shroud.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Refer to PIC 2 and 3. Remove existing hardware on the rear of the oil line, located to the right of the transmission bearing house and under the exhaust system.


STEP 3 Refer to PIC 4. Locate provided Cover, Washer, and Screw. Place the washer on the screw.

STEP 4 Refer to PIC 5. Locate provided Cover. Align and place the cover over the oil line. Insert the screw and washer assembly into the rear mounting hole of the cover. Fully tighten hardware.

TORQUE VALUE FOR OIL LINE SCREW:
34-39 FT-LBS (46.1-52.9N-M)



PIC 1

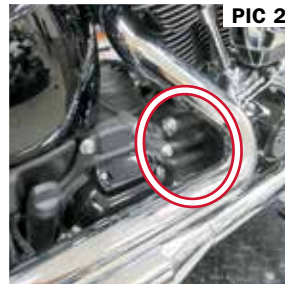


PIC 2



PIC 3



PIC 4

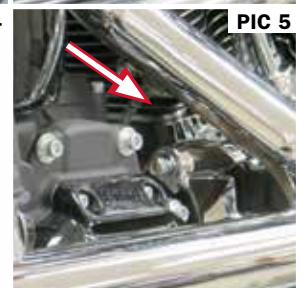

PIC 5

INSTALLATION INSTRUCTIONS

PRECISION™ OIL LINE COVER, CHROME

6460

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



FINAL