

INSTALLATION INSTRUCTIONS

PRECISION CHIN SPOILER, GLOSS BLACK

6465

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Chin Spoiler
- 2 1/4-20 X 0.675" Button Head Cap Screws
- 2 1/4 Flat Washer

YOU WILL ALSO NEED:

Socket set, hex wrench set, torx bit set, ratchet

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Refer to PIC 2. Remove existing oil cooler cover.

STEP 3 Refer to PIC 2. Remove OEM hex bolt at the very top of the frame.

STEP 4 Locate provided Chin Spoiler, two (2) screws, and two (2) flat washers. Place a washer onto each of the screws.


STEP 5 Refer to PIC 3. Align and place the Chin Spoiler over the front of the oil cooler.

1/4 FLAT
WASHER

1/4-20 X
.675" BHCS



PIC 1

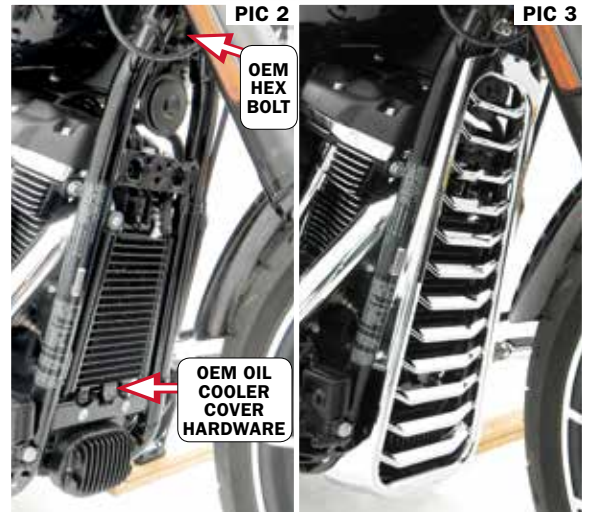

PIC 2

OEM
HEX
BOLT

PIC 3

OEM OIL
COOLER
COVER
HARDWARE

INSTALLATION INSTRUCTIONS

PRECISION CHIN SPOILER, GLOSS BLACK

6465

-CONTINUED-

STEP 6 Refer to PIC 4. Align the top mounting hole of the spoiler with the mounting hole where the OEM hex bolt was removed in Step 3. Insert and fasten a screw and washer assembly through the aligned mounting holes. Lightly tighten hardware.



STEP 7 Refer to PIC 5. Align the lower mounting hole of the spoiler with the mounting hole where the OEM oil cooler cover was fastened to. Insert and fasten the remaining screw and washer assembly through the aligned mounting holes. Fully tighten all hardware.



NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.