

## INSTALLATION INSTRUCTIONS

PRECISION™ COIL COVER, GLOSS BLACK

6467

### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |            |   |                                   |
|---|------------|---|-----------------------------------|
| 1 | Coil Cover | 1 | Hardware Kit, containing:         |
|   |            | 1 | 1/4-20 x 3" Socket Head Cap Screw |
|   |            | 1 | Standoff                          |
|   |            | 1 | 1/2" x 1.5" Single Sided VHB Foam |

### YOU WILL ALSO NEED:

Torx driver set, hex bit socket set, ft-lbs (Nm) torque wrench

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.




**STEP 2** Refer to PIC 2. Remove existing hardware from the ignition coil.



**STEP 3** Refer to PIC 3. Locate provided Cover, Screw, Standoff, and VHB Foam.

**STEP 4** Refer to PIC 3. Clean the inside surface area of the cover and allow to dry. Remove adhesive backer from the provided VHB Foam. Align and place the foam pad on top of the standoff area located under the mounting hole on the back side of the cover.

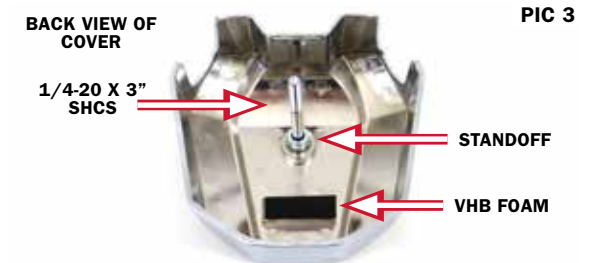

**STEP 5** Refer to PIC 3. On the front side of the cover insert the screw through the mounting hole. On the back side of the cover, place the standoff on to the inserted screw.

## INSTALLATION INSTRUCTIONS

### PRECISION™ COIL COVER, GLOSS BLACK

6467

-CONTINUED-

- STEP 6** Refer to PIC 4. Align the cover assembly with ignition coil, and ignition coil mounting bracket. Insert the screw through the ignition coil and bracket and fully tighten.

**TORQUE VALUE OF IGNITION COIL SCREW:**  
11-14FT-LBS (15-19NM)

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

