

INSTALLATION INSTRUCTIONS

MESH HEADLIGHT VENT ACCENTS FOR ROAD GLIDE, SATIN BLACK

6519

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|----------------------|---|-------------|
| 1 | Left Fairing Accent | 1 | Alcohol Pad |
| 1 | Right Fairing Accent | | |

YOU WILL ALSO NEED:

Warm soapy water and a clean rag, masking tape

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

NOTICE ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).


STEP 2 Refer to PIC 1. Locate the Right Fairing Accent. The accent has a narrower bottom and wider top. Test fit it in the fairing air duct to make sure you have the correct accent before installing it.

STEP 3 Refer to PIC 2. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.

STEP 4 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 5 Refer to PIC 3 and 4. Align and place the accent into the right fairing air duct, leading with the side edge of the accent with the clips, allowing it to snap into place. Press it into place for one minute; full bonding will occur after 24 hours.

NOTE: If the bike is going to be operated before full bonding occurs, secure the Accent to the fairing with a good quality masking or painter's tape.

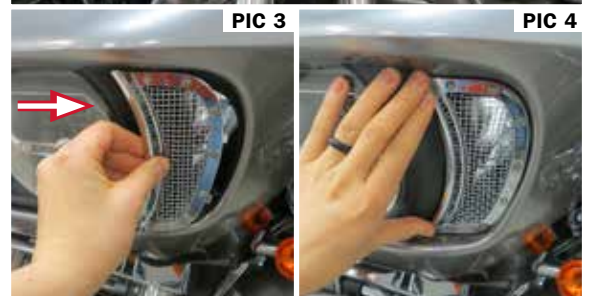

INSTALLATION INSTRUCTIONS

MESH HEADLIGHT VENT ACCENTS FOR ROAD GLIDE, SATIN BLACK

6519

-CONTINUED-

STEP 6 Repeat Steps 2 through 5 for the left side.

*Note: The Mesh Headlight Vent Accents **must** be removed from the fairing air ducts **before** the outer fairing is ever removed. The outer fairing cannot be properly removed with the accents in the air ducts.*

The accents can be reinstalled after the re-installation of the fairing. Remove and replace the old foam tape from the fairing air ducts and accents before re-installation. Be sure to thoroughly clean the areas that the tape was removed from before applying new tape.

TAPE USED: 3M™ VHB™ TAPE 4959

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

