

INSTALLATION INSTRUCTIONS

UPPER AIR DEFLECTORS

6578

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

- WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
- CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
- NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|--------------------------|---|---------------------------------------|
| 1 | Left Air Deflector | 2 | M5 X .8 X 20mm Button Head Cap Screws |
| 1 | Right Air Deflector | 2 | M5 Flat Washer |
| 1 | Left Mount (clutch side) | | |
| 1 | Right Mount (brake side) | | |

YOU WILL ALSO NEED:


Metric hex wrench set

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2** Refer to PIC 1. Dismantle the Left and Right Air Deflectors. Pay attention to how parts come apart.
- STEP 3** Refer to PIC 2. Remove existing hardware from under the mirror. Set it aside, it will not be reused.
- STEP 4** Locate provided Right (brake-side) mount, one (1) M5 Screw and one (1) M5 Flat Washer. Place the washer onto the screw.

*Note: Mounts have an "L" or an "R" stamped on the bottom of them.
L = Left (clutch side) and R = Right (brake side)*

- STEP 5** Refer to PIC 3. Align and insert the bossed mount side of the mount with the mounting hole under the mirror. Secure it in place using the M5 washer and screw assembly. Fully tighten hardware.

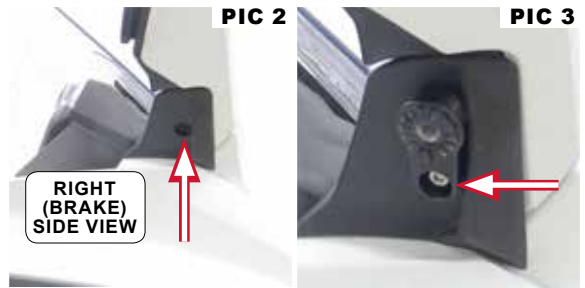

INSTALLATION INSTRUCTIONS

UPPER AIR DEFLECTORS

6578

-CONTINUED-

- STEP 6** Refer to PIC 4 and 5. Locate provided Right Air Deflector, one (1) shoulder bolt, one (1) wave washer, and one (1) flat washer. Place the wave washer, followed by the flat washer, onto the shoulder bolt.

Note: The side with the "design" print on the air deflector is the side that is visible from the front of the bike.

- STEP 7** Refer to PIC 6. Align the splined mount of the air deflector with the splined mount of the installed mount. Secure the deflector to the mount using the shoulder bolt and washers assembly. Loosely tighten bolt.

- STEP 8** Refer to PIC 7. Set desired position of upper air deflector by moving it in or out. Once desired position is set, fully tighten mounting hardware.

- STEP 9** Repeat steps 3 through 8 on the left (brake) side.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

