

INSTALLATION INSTRUCTIONS

UNIVERSAL RUBBER BRAAAP! WRAP GRIPS

6594 1" BLACK, 6595 1" RED, 6596 7/8" BLACK, OR 6597 7/8" RED

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right-Side (Throttle) Grip - Larger Inner Diameter
- 1 Left-Side (Clutch) Grip - Smaller Inner Diameter

YOU WILL ALSO NEED:

Utility Knife with a Sharp Blade, Sandpaper, Electrical Tape, WD-40

NOTICE


THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Remove the existing grips and bar end weights from the handlebars. Using a razor blade or utility knife, cut the grip lengthwise from the switch housing out towards the end of the grip. When cutting away the existing grips, be certain not to cut through the throttle sleeve. Peel the grip away from the handlebar or throttle sleeve. This may take some effort, as the grips are glued on from the factory

STEP 3 With sandpaper or emery cloth remove all grip and adhesive residue from both the throttle sleeve (right side) and exposed handlebar (left side). If your throttle sleeve has ribbed marks or other protrusions, it will have to be sanded or ground smooth to allow the grip to slide into place. The surface should be completely clean and slightly roughed from sanding. With an ammonia based cleaner or similar degreasing agent and a clean rag, wipe off the throttle sleeve and exposed handlebar.

STEP 4 Locate provided Right-Side (Throttle) Grip. Spray some WD-40 inside of the grip sleeve and on the throttle sleeve.

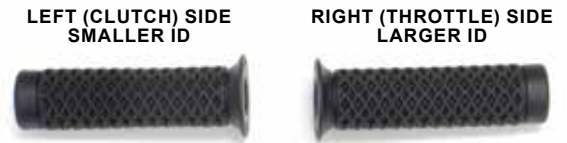

INSTALLATION INSTRUCTIONS

UNIVERSAL RUBBER BRAAAP! WRAP GRIPS

-CONTINUED-

STEP 5 Refer to PIC 2 and 3. Slide the grip into place, rotating it as you slide it on. Full bonding will occur in 24 hours.

STEP 6 Locate the Left-Side (Clutch) Grip. Repeat step 4 through 5 on the left (clutch) side.

PHOTOS SHOWN ON NAKED HANDLE BARS OFF A BIKE.
PHOTO IS FOR VISUAL REFERENCE ONLY

PIC 2



PIC 3



WARNING

ENSURE THE THROTTLE ROTATES AND RETURNS FREELY BEFORE STARTING THE MOTORCYCLE. THROTTLE MALFUNCTION CAN RESULT IN LOSS OF CONTROL WHICH CAN RESULT IN SERIOUS INJURY OR DEATH.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.