

INSTALLATION INSTRUCTIONS

TOUR-PAK® LID LIGHT, CHROME

6706

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|--------------------|---|---------------------------|
| 1 | Tour-Pak Lid Light | 1 | Hardware Kit, containing: |
| 1 | Y-Adapter | 6 | 6" Cable Tie |
| | | 4 | Cord Keeper |
| | | 2 | Cable Tie Mount |
| | | 2 | Alcohol Pad |

YOU WILL ALSO NEED:

Hex wrench set, socket set and ratchet, clean rag and warm soapy water


PICTURES SHOWN ARE OF THE BLACK PART. INSTALLATION OF THE CHROME PART WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.
- STEP 2** Remove the passenger backrest pad from the Tour-Pak. Set the backrest, and hardware, off to the side on a flat clean surface.
- STEP 3** Remove the motorcycle's seat to gain access to the battery and rear lights wiring harness. Set the seat on a flat clean surface off to the side.
- STEP 4** Refer to PIC 2 and 3. Locate provided Y-Adapter. Disconnect the rear lights from the existing wiring harness. Connect the single plug side of the provided Y-Adapter to the bike's wiring harness plug. Connect one of the plugs, on the double-side of the new adapter, to the rear light's plug.
- STEP 5** Locate provided Tour-Pak Lid Light. Connect the lid light plug to the remaining plug on the double-side of the provided adapter.
- STEP 6** Reinstall main fuse and test lights for proper run/turn/break operations.

NOTICE ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

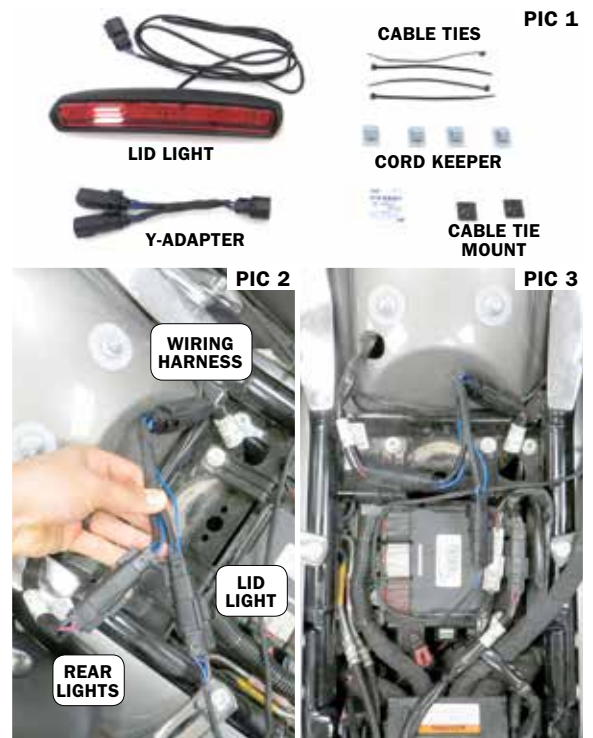

INSTALLATION INSTRUCTIONS

TOUR-PAK® LID LIGHT, CHROME

6706

-CONTINUED-

STEP 7 Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely.

Wipe the installation area with one (1) of the included alcohol pads to remove any wax or polish; allow the area to dry completely.

Note: The Tour-Pak luggage rack can be removed for ease of installation.

STEP 8 Test fit the lid light. Use masking tape to make alignment marks; remove the lid light.

STEP 9 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 10 Refer to PIC 4. Align the lid light; press into place for one minute; full bonding will occur after 24 hours.

Note: If the bike is going to be operated before full bonding occurs, secure the lid light to the bike with a good quality masking or painter's tape.

STEP 11 Using warm soapy water and a clean rag, remove all dirt and debris from the front of the Tour-Pak where the passenger backrest pad was fastened. Allow the area to dry completely.

Wipe the installation area with one (1) of the included alcohol pads to remove any wax or polish; allow the area to dry completely.

STEP 12 Refer to PIC 5 through 8. Locate provided Cable Tie Mount and Cable Tie. On the bottom portion of the Tour-Pak, along the edge of the passenger's left (clutch) side speaker, align and place the mount. Insert the cable tie through the mount. Place the lid light cord on top of the mount, in between each open end of the cable tie. Loosely fasten the cable tie around the wire.

STEP 13 Refer to PIC 5 through 9. Locate provided four (4) Cord Keepers. Test fit several locations along the front of the Tour-Pak for the Cord Keepers. Use masking tape to make alignment marks.


Note: The Cord Keepers are meant to hold the lid light cord in place. Be sure Cord Keepers are positioned to avoid the mounting holes of the backrest pad and any potential pinching of the wire, while providing enough slack in the wire to allow the Tour-Pak to open and close properly. Tape the Cord Keepers in place and test fit the backrest pad to ensure proper installment.

STEP 14 Once desired positions of Cord Keeper is determined, repeat the process from steps 8 through 9 for them.


STEP 15 Refer to PIC 9. Open the Tour-Pak to determine that the wire has enough slack to allow it to open and close properly. Once satisfied with wire slack and positioning, tighten the cable tie (from Step 11).



PIC 4

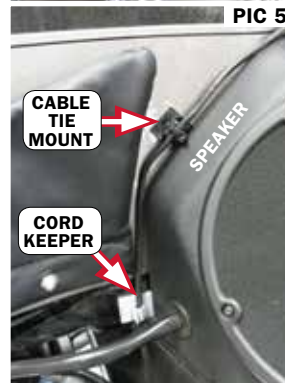

PIC 5

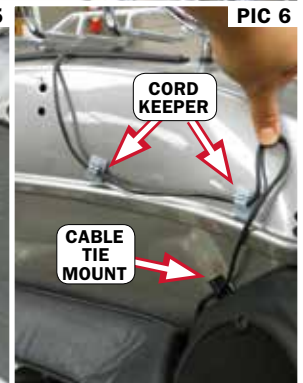

PIC 6



PIC 7



PIC 8



PIC 9

INSTALLATION INSTRUCTIONS

TOUR-PAK® LID LIGHT, CHROME

6706

-CONTINUED-

STEP 16 Reinstall the seat and backrest pad.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



FINAL