

INSTALLATION INSTRUCTIONS

PASSENGER BACKREST FOR GOLD WING

6773

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Backrest
- 4 M8 x 1.25 x 30mm Button Head Cap Screws
- 1 Thumb Screw

YOU WILL ALSO NEED:

Metric hex bit set, ft-lbs (Nm) torque wrench, blue loctite,

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Refer to PIC 2 and 3. Remove the left and right rear top lid. Set them aside, they will not be reused.

Note: It is suggested to take the lids off using your fingers, or a softly padded tool, to prevent damage to motorcycle.

STEP 3 Refer to PIC 4. Locate provided Backrest and four (4) M8 screws. Align and place the Backrest. Secure it in place using the M8 screws. Fully tighten hardware.

TORQUE VALUE OF BACKREST MOUNTING SCREWS:
16 FT-LB (22NM)

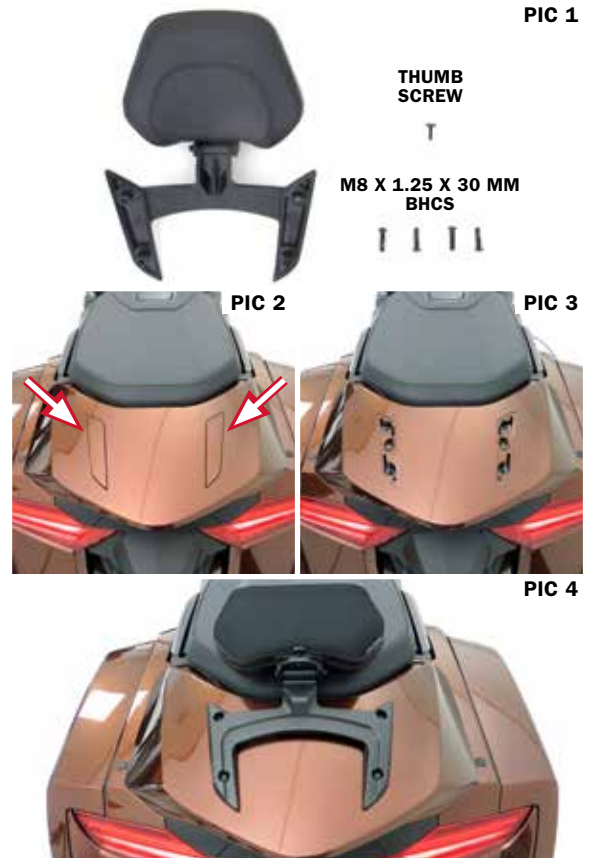

INSTALLATION INSTRUCTIONS

PASSENGER BACKREST FOR GOLD WING

6773

-CONTINUED-

STEP 4 Refer to PIC 5. Locate provided Thumb Screw and apply a small amount of loctite to it. On the backside of the Backrest insert the Thumb Screw into the mounting hole.

STEP 5 Adjust the angle of the Backrest by tightening or loosening the Thumb Screw.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

