



TRI LINE ACCENT for REAR TOUR PAK™ LIGHT

6910

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Top Accent
- 1 Left Accent
- 1 Right Accent
- 1 Antenna Plug
- 2 Alcohol Pads
- 1 Installation Instructions

YOU WILL ALSO NEED:

Warm, soapy water and a clean rag, masking/painter's tape

NOTICE These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

STEP 2 Unthread the existing antenna(s) by turning them counterclockwise; remove and set aside for now.

STEP 3 Refer to **PIC 1**. Using warm, soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely.



NOTICE Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTICE

Ensure proper adhesion of this product. Remove all grease, oil, bugs, dirt, and other debris (including wax and polish) from the installation area. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation.

Do not attempt this installation in temperatures below 50°F (10°C). Proper adhesive bonding **ONLY** occurs above 50°F (10°C).

STEP 4 Refer to **PIC 2**. Test fit the Left Accent as shown; use masking tape to make alignment marks; remove the Accent.



STEP 5 Refer to **PIC 3**. Test fit the Right Accent as shown.
Position the Accent over the edge of the Left Accent; use masking tape to make alignment marks; remove the Accent.




STEP 6 Use your fingernail to rub the adhesive backing on the backside of the Left Accent; this will activate the adhesive. Remove and discard the backing.

STEP 7 Align the Accent and press it into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

STEP 8 Repeat **STEPS 6 AND 7** for the Right Accent.

STEP 9 Refer to **PIC 4**. Test fit the Upper Accent as shown; use masking tape to make alignment marks; remove the Accent.

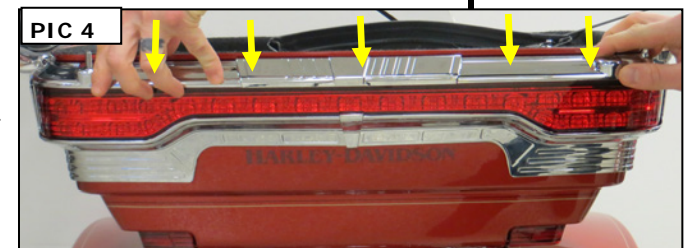


STEP 10 Prepare the adhesive backing on the Upper Accent in the same way as the others.

STEP 11 Align the Accent and press it into place for one minute; remove and discard the masking tape.

STEP 12 An Antenna Plug has been included in the kit for motorcycles WITHOUT a CB antenna.
Ensure the Top Accent is clean and dry;
prepare the adhesive as before and position the Plug over the exposed hole in the Top Accent; press into place for 60 seconds.

STEP 13 Reinstall the antenna(s).

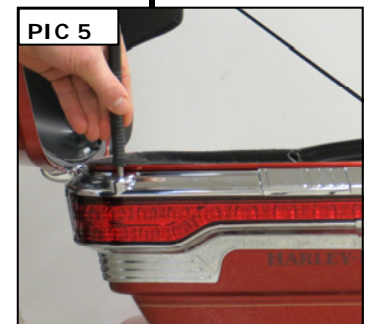

Ride On!