



TRI-LINE INNER FAIRING COVER PLATES, GLOSS BLACK

6979

Thank You For Choosing Küryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right-Side Cover Plate
- 1 Left-Side Cover Plate
- 1 Alcohol Pad
- 1 Installation Instructions

YOU WILL ALSO NEED:

Warm, soapy water and a clean rag, Torx drivers, soft, sturdy work surface

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future use.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Remove the main fuse (refer to NOTICE on PAGE 2).

WARNING

THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

- STEP 2** **Models with fairing mounted mirrors:** Remove the outer fairing and windshield; disconnect the headlight; set it all on a soft, sturdy surface.

Remove the existing fairing mounted mirrors; set them aside.

- STEP 4** **ALL MODELS:** Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely.

Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.






STEP 5 Refer to **PIC 2**. Determine the left and right-side Cover Plate.

STEP 6 Test fit the Accent as shown in **PIC 2**. Use masking tape to make alignment marks; remove the Accent.

Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 7 Align the Accent and press it into place for one minute; full bonding will occur after 24 hours. Remove and discard the masking tape.

Repeat for the other side.

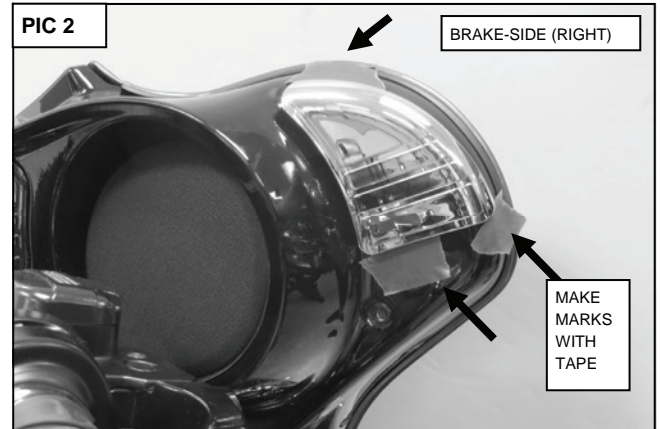

NOTE: If the bike is going to be operated before full bonding occurs, secure the Accent to the fairing with a good quality masking or painter's tape.

STEP 8 **Models with fairing mounted mirrors:** Reconnect the headlight; reinstall the outer fairing and windshield.

STEP 9 Reinstall main fuse; ensure proper function of ALL lighting/signals before operating the motorcycle.

WARNING

VISIBILITY IS A **MAJOR** CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION **BEFORE** RIDING THE MOTORCYCLE.

NOTICE

It is the end user's responsibility to ensure that all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.