



TRI-LINE IGNITION SWITCH COVER, '14-UP, GLOSS BLACK

6985

Thank You For Choosing Kuryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Ignition Switch Cover, Chrome
- 1 VHB™ Cover Adhesive
- 1 Alcohol Pad

YOU WILL ALSO NEED:

Warm soapy water and a clean rag, small flat blade screwdriver or pick tool

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future use.

- STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Remove the main fuse.

WARNING

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

- STEP 2 Refer to PIC 1. Using a small flat blade screwdriver or pick tool, remove the OEM emblem; discard the emblem, it will not be reused. The emblem must be removed for the Cover Adhesive to stick properly.

- STEP 3 Refer to PIC 1. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included Alcohol Pad to remove any wax or polish; allow the area to dry completely.

- STEP 4 Test fit the Ignition Switch Cover over the ignition switch. Note the alignment of the key holes for later; remove the Cover. Make a note if there is excessive slop in the fit; the included foam pads have been included to take up any slop in the fit.

- STEP 5 Locate the included VHB™ Cover Adhesive. Rub the backing to activate the adhesive. Remove and discard one side of the backing. Refer to PIC 2. Apply the VHB™ Cover Adhesive to the Ignition Switch Cover; ensure that it is positioned in the recess in the Cover. Press the Adhesive onto the Cover for one full minute. Full bond will occur in 24 hours.

If necessary, prepare and apply the foam pads to the inside edges to take up any excessive slop in the fit.


- STEP 6 Remove and discard the remaining adhesive backing. Refer to PIC 3. Align the Cover and press it into place for one minute; full bonding will occur after 24 hours.

- STEP 7 Reinstall the main fuse. Ensure proper ignition switch, neck lock, and key functions and clearance **BEFORE** operating the motorcycle.





PIC 2

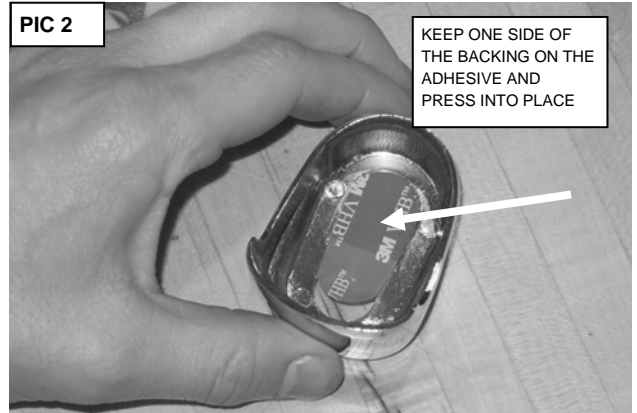

PIC 3



NOTICE

It is the end user's responsibility to ensure that all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.