

## INSTALLATION INSTRUCTIONS

### HEAVY INDUSTRY DRIVER FLOORBOARDS, SATIN BLACK

7042

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |                                   |   |                           |
|---|-----------------------------------|---|---------------------------|
| 2 | Heavy Industry Driver Floorboards | 1 | Hardware Kit, containing: |
|   |                                   | 4 | 1/4-20 X 1 Shoulder Screw |
|   |                                   | 8 | 1/4" SAE Flat Washers     |
|   |                                   | 4 | 1/4-20 Locking Nut        |

#### YOU WILL ALSO NEED:

Socket set, hex set

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**WARNING** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Refer to PIC 1 and 2. Remove existing hardware from driver floorboard. Set hardware aside, it will not be reused.

**STEP 3** Refer to PIC 3. Remove floorboard from the bracket.



## INSTALLATION INSTRUCTIONS

### HEAVY INDUSTRY DRIVER FLOORBOARDS, SATIN BLACK

7042

-CONTINUED-

**STEP 4** Locate provided two (2) screws, four (4) flat washers, and two (2) locking nuts.


**PIC 4**



**STEP 5** Refer to PIC 5 and 6. Locate a Heavy Industry Driver Floorboard. Align and place on mount. Place a flat washer on each of the screws. Insert the screw through the aligned floorboard and mounting bracket holes. Secure the floorboard to the bracket by placing a wave washer on each screw and fastening it with the lock nuts. Tighten all hardware securely.

**PIC 5**

**PIC 6**

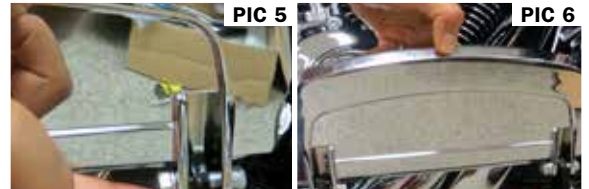

**STEP 6** Repeat Steps 2 through 5 for the opposite side.

#### NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

**FINAL**

