

INSTALLATION INSTRUCTIONS

QUICK RELEASE MOUNT FOR MULTI-PURPOSE BACKREST TOURING, CHROME

7093

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Quick Release Bracket
- 1 Right Quick Release Bracket
- 2 Flat Washers

YOU WILL ALSO NEED:

Set of Hex Wrenches, Set of Torx Wrenches, Torque Wrench (FT/LBS) and Set of Hex Bit Sockets, Blue Loctite

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 IF INSTALLING WITH KURYAKYN PN-7098 QUICK RELEASE ATTACHMENT POINT KIT (sold separately), continue to Step 6.

IF INSTALLING WITH H-D 4-POINT DOCKING HARDWARE, continue to Step 3.



STEP 3 Refer to PIC 2 and 3. Remove the docking point fastener and docking point from the front of the mounting plate. Set it aside.

STEP 4 Refer to PIC 4 and 5. Locate provided one (1) flat washer. Place washer onto the front docking point arm. Reinstall the docking point and fastener that was removed in Step 3. Fully tighten hardware.

STEP 5 Repeat Steps 3 through 4 on the opposite side.



FLAT WASHERS

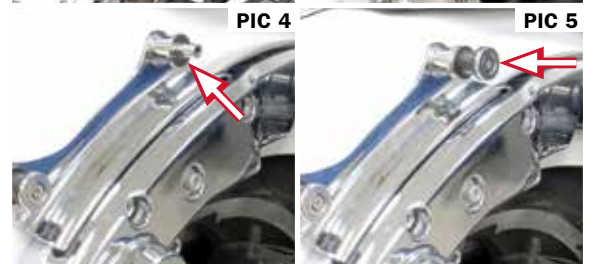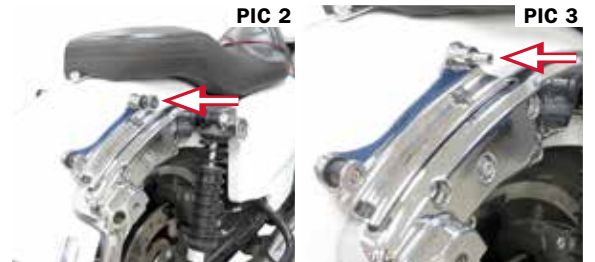

INSTALLATION INSTRUCTIONS

QUICK RELEASE MOUNT FOR MULTI-PURPOSE BACKREST TOURING, CHROME

7093

-CONTINUED-

STEP 6 Refer to PIC 6. Starting on the right (brake) side. Locate provided right bracket. Align the front mounting hook with the front connecting point of the attachment point kit.



PIC 6

STEP 7 Refer to PIC 7. With the rear fastening latch pulled back, slide the rear mounting latch over the rear connecting point of the attachment point kit.




PIC 7

STEP 8 Refer to PIC 8. Release the locking latch to secure the quick release mount in place.



PIC 8

STEP 9 Refer to PIC 9. Repeat Steps 6 through 8 for the left (clutch) side.

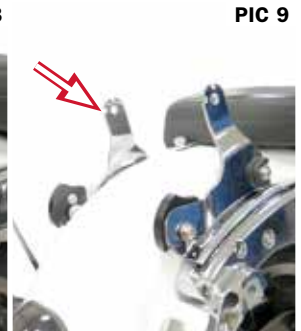

PIC 9

STEP 10 Locate Multi-Purpose Backrest (P/N 1660 or 1661 - sold separately). Test fit the backrest between the fixed mounts. The Backrest should slide easily between the fixed mounts.

STEP 11 Refer to PIC 10 through 12. Install the backrest to the Fixed Mounts by inserting one of the supplied (with the backrest) 5/16"-18 X 7/8" countersunk socket head cap screws through one of the supplied shoulder washers, through the Fixed Mount and threading it to the Driver/Passenger Backrest on each side. Fully tighten hardware. If these fasteners are loosened or removed, see **WARNING!** below.

TORQUE VALUE FOR BACKREST SCREWS:
15 FT-LBS (20.34 NM)



PIC 10



SCREW

SHOULDER WASHER



PIC 12

WARNING

BOTH PIVOT/HINGE SCREWS MUST HAVE THREADLOCK COMPOUND RE-APPLIED AND RE-TORQUED ONCE REMOVED, AFTER INITIAL INSTALLATION. FAILURE TO DO SO MAY RESULT IN UNINTENDED LOOSENING AND MAY CAUSE SERIOUS INJURY OR DEATH. THE FEMALE THREADS IN THE MULTI-PURPOSE BACKREST AND THE THREADS ON THE REMOVED SCREWS WILL NEED TO BE CLEANED TO REMOVE ANY THREADLOCK RESIDUE BEFORE RE-INSERTING. RE-APPLY LOCTITE® THREADLOCK BLUE 242® OR EQUIVALENT, AS SHOWN IN PIC 10, RE-TORQUING TO 15 FT-LBS (20.3 NM) USING A TORQUE WRENCH AND 3/16" ALLEN/HEX KEY ATTACHMENT. LET CURE PER THE THREADLOCK MANUFACTURERS INSTRUCTIONS AFTER INSTALLATION. IF YOU DO NOT WISH TO APPLY THREADLOCK, THEN ORDER A NEW SERVICE KIT, (P/N 991660) WHICH WILL CONTAIN SCREWS WITH BLUE THREADLOCK ADHESIVE PRE-APPLIED.

INSTALLATION INSTRUCTIONS

QUICK RELEASE MOUNT FOR MULTI-PURPOSE BACKREST TOURING, CHROME

7093

-CONTINUED-

STEP 12

Refer to PIC 14 and 15. Check the operation of the Backrest by folding the locking levers to the straight out position. Lower or raise the backrest to the desired location. Fold the locking levers over to lock them in place. Gently rock the Backrest back and forth to ensure the locking pins are engaged in the notches in the Fixed Mounts. Repeat for the other position of the Backrest. Visually inspect the Shoulder Washers and Countersunk Socket Head Cap Screws at the pivot point for any signs of loosening before each ride. Kuryakyn requires checking all backrest attaching fasteners to the torque specifications defined in these instructions every 3,000 to 5,000 miles.

Note: See instructions for Multi-Purpose Driver/Passenger Backrest, P/N 1660 or P/N 1661, for adjustment procedures.

WARNING

THIS BACKREST IS NOT DESIGNED AS A SAFETY RESTRAINING DEVICE. FAILURE TO HOLD ONTO THE MOTORCYCLE MAY RESULT IN SERIOUS INJURY OR DEATH.

CAUTION


ENSURE THAT THE INSTALLATION OF THIS PRODUCT DOES NOT INTERFERE WITH THE PROPER OPERATION OF THE MOTORCYCLE BEFORE RIDING.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 13
APPLY THREAD LOCK TO SCREW

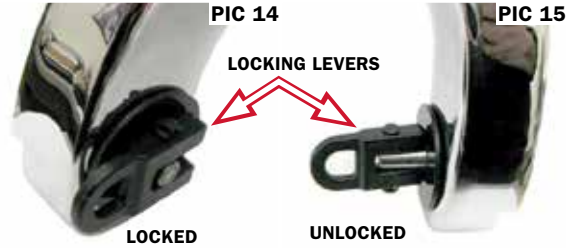

PIC 14
LOCKED

PIC 15
UNLOCKED

FINAL

