



KICK STAND EXTENSION 7109

FITS: GL1800 OEM KICKSTAND AND KÜRYAKYN P/N 7104 STAND-RITE KICKSTAND

PART #	INCLUDED
607109	1 Kickstand Extension Assembly Including: 1 Main Lever 1 Threaded Bracket 1 Bracket 1 1" x 7/8" Single Sided Rubber Tape 1 1" OD x .0275 ID x .10 Thick Washer
307109	3 1/4-20 x 3/4" Button Socket Cap Screws (BSCS) 2 Internal Tooth Star Washer 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTE: When used with our Driver Floorboard Kit for GL1800 (P/N 4038), it allows the rider to deploy the kickstand without folding up the floorboard.

CAUTION! When installing this part to your kickstand, marring may occur.

ATTENTION! It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

IMPORTANT

Make sure that the mounted position of this extension does not interfere with ground clearance when in a turn.

PROCEDURE

STEP 1 Review FIG. 1 for proper example of assembly. The two internal tooth star washers must be on each side of the lever as shown in FIG. 1.

STEP 2 Remove the back two bolts and loosen the single lever arm bolt.

-cont.-



STEP 3 Place the clamp around the base of the kickstand so the bolts face down when the kickstand is in the up position.

STEP 4 Adjust the kickstand extension into the desired position. The lever arm can be rotated around the single mounting bolt and positioned with the angle up or down to best fit your application.



STEP 5 To install, start all three fasteners. Leave the two main fasteners at the one end loose. Tighten the single fastener making sure the bracket, washers, and lever arm have fully compressed/tightened.

STEP 6 To finish securing the extension assembly, snug up the two inside fasteners. Do not over tighten. Over tightening will bend the bracket and crack the chrome.

NOTE: The following photos show the extension mounted on a GL1800 with Küryakyn floorboards P/N 4038 and a Küryakyn kickstand P/N 7104 installed.

Ride On!

Küryakyn[®]

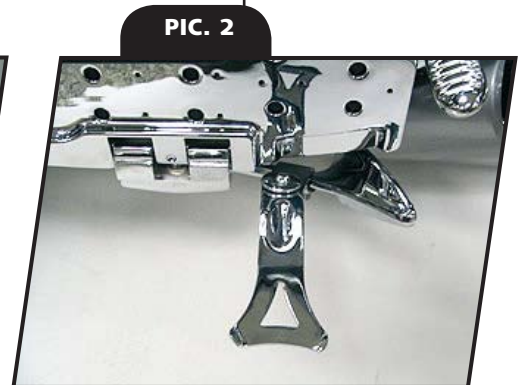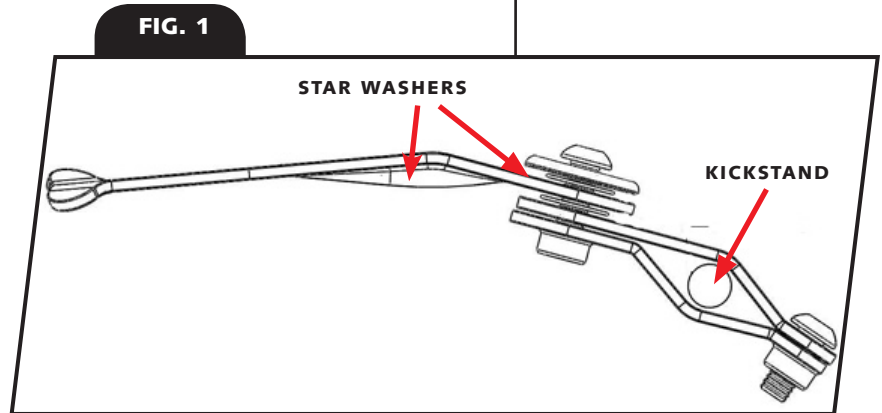

PAGE
2

KICK STAND EXTENSION

INSTALLATION

Learn more about motorcycle frames and body we have.