

INSTALLATION INSTRUCTIONS

LOWER FORK COVERS FOR TOURING, GLOSS BLACK

7147

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|----------------------------------|---|---------------------------------------|
| 1 | Lower Fork Cover - Left (clutch) | 1 | Hardware Kit, containing: |
| 1 | Lower Fork Cover - Right (brake) | 4 | 1/4-20 X 1.75" Button Head Cap Screws |
| | | 4 | Flat Washers |

YOU WILL ALSO NEED:


Hex wrench set, hex socket bit set, ft-lbs (Nm) torque wrench

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2** Refer to PIC 2. Starting on the right (brake) side first. Remove existing hardware connecting the lower fork to the front fender.
- Note: Remove any additional items that may be installed on the lower fork and axle nut area. Additional items such as reflectors or axle covers will effect the installation of the Lower Fork Cover. The provided Lower Fork Covers will not install properly if there is additional items underneath it.*
- STEP 3** Refer to PIC 3 and 4. Locate provided Right (brake) side Lower Fork Cover. Align it with the right side lower fork. Align and insert the rubber boss, located on the bottom inside of the Lower Fork Cover, with the bottom of the lower fork. Press the cover up against the fork.
- Note: Take note of the stampings made on the back side of the covers for assistance on determining sides.
L = Left (clutch side), R = Right (brake side)*

- STEP 4** Tighten the screw located on the bottom outside of the cover. Tighten until the cover is secured in place.

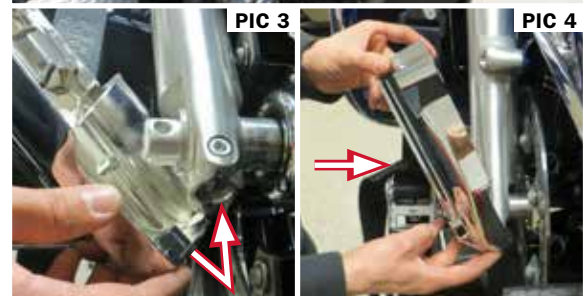

INSTALLATION INSTRUCTIONS

LOWER FORK COVERS FOR TOURING, GLOSS BLACK

7147

-CONTINUED-

STEP 5 Locate provided two (2) Button Head Cap Screws and Flat Washers. Place a flat washer onto each of the screws.

STEP 6 Refer to PIC 5 and 6. Align the mounting holes of the Lower Fork Cover with the lower fork and front fender. Insert the screw and washer assembly into the aligned mounting holes and fully tighten hardware.

TORQUE VALUE FOR LOWER FORK TO FENDER SCREWS:
16-20 FT-LBS (21.7-27.1 NM)

STEP 7 Refer to PIC 7. Repeat Steps 2 through 6 for left (clutch) side.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 5



PIC 6



PIC 7