



## TRUNK LATCH/KEY HOLE ACCENT for TRIKES

7215

### PARTS INCLUDED

- 1 Trunk Latch/Key Hole Accent
- 1 Alcohol Pad
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Masking tape, Non-Permanent Marker

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**


**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Remove any grease or debris from the installation area with soapy water and a clean rag; rinse and allow the area to dry completely. PIC 1 Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**ATTENTION!** The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F. Rub the backing on the adhesive strip to activate the adhesive before applying.

**STEP 3** Test fit the Latch/Key Hole Accent to the deck. Make any reference marks with a non-permanent marker or masking tape. Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the paper backing. Press the Latch/Key Hole Accent into place for full 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

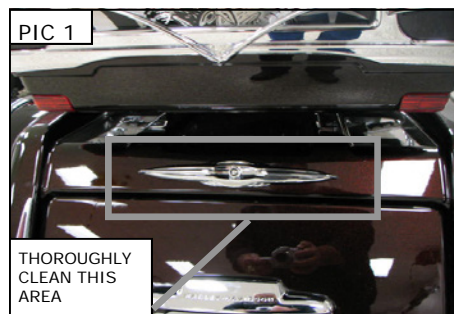

*Ride On!*