



TOP FENDER ACCENT for TRIKES 7216

PARTS INCLUDED

- 2 Top Fender Accents
- 4 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.


TOOLS SUGGESTED

Tape Measure, Masking Tape or Non-Permanent Marker

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Clean the installation area on the top of both fenders. PIC 1 If the area is extremely dirty, clean with warm water and a mild soap making sure to remove all surface contaminants. Rinse the area and dry completely. Use the included alcohol pads, after the area is dry to remove any residue.

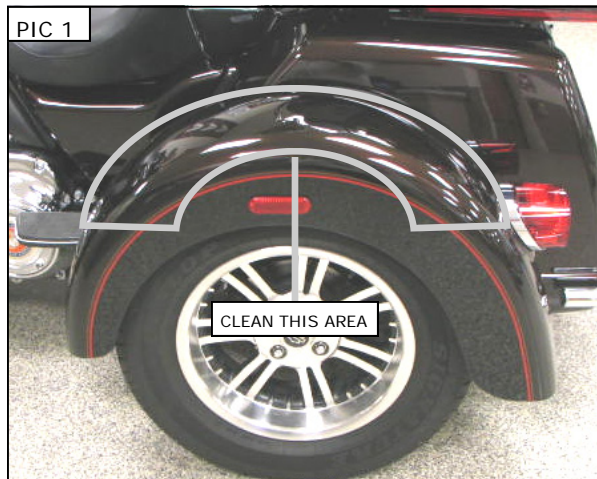

-cont.-

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Küryakyn recommends “mocking up” components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 Test fit the Top Fender Accent to the top of the left fender. Use the taillight location to center the rear of the Accent. Use a tape measure or “eye” the front of the Accent to center it. Mark the location of best fit using masking tape or a non-permanent marker. PIC 2 and PIC 3 This will help with final installation of the Top Fender Accent.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Rub the adhesive backing on the Top Fender Accent to activate the adhesive.

STEP 5 Starting from the rear of the Accent, peel the adhesive backing away from the Accent. Apply the rear of the Accent to the center location marked in Step 3. Slowly peel the adhesive backing while applying the Accent along the top of the fender using the reference marks made in Step 3.

STEP 6 Press and hold the Top Fender Accent in place for one minute, full bonding strength will occur in 24 hours.

STEP 7 Using the rear of the left Top Fender accent as a reference, measure the distance from the top of the taillight to the rear tip of the Accent. Measure from the body to the front and rear of the Accent. PIC 4 Using these measurements as a gauge, mark this location on the right fender top. Set the right Top Fender Accent in place and center it on the fender top. Make any reference marks with masking tape or a non-permanent marker.

STEP 8 Repeat Steps 4, 5 and 6, for the right side.

