



REAR FENDER ACCENTS for TRI-GLIDE 7217

PARTS INCLUDED

- 2 Rear Fender Accents—Leading Edge
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Masking Tape, Non-Permanent Marker, Tape Measure


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Kuryakyn recommends "mocking up" components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

STEP 2 Remove any grease or debris from the front of both fenders with soapy water and a clean rag; rinse and allow the area to dry completely. PIC 1 Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

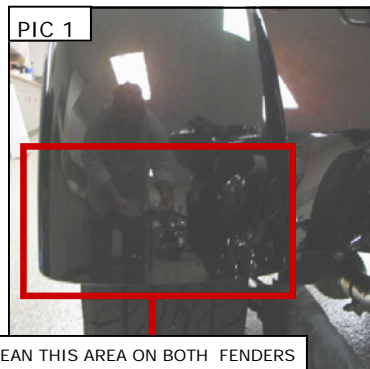

THOROUGHLY CLEAN THIS AREA ON BOTH FENDERS

**STEP 3** Hold one of the Accents up to one of the fenders. There is a lip on the bottom of the Fender Accent that will rest against the bottom edge of the rear fender. Apply a piece of masking tape to the front of each fender directly above the top of the Accent. PIC 2 Using a tape measure, mark the center of each fender on the masking tape.

**STEP 4** Using a piece of masking tape, attach each Fender Accent to the front of the fenders. PIC 3 Center the top of each Accent to the mark made in Step 3. Holding the Accent tight to the bottom edge of the fender, use masking tape or a non-permanent marker to mark the side locations of the Accent.

**STEP 5** Step back from the Trike and ensure that the Accents are correctly located in the center of the fenders. PIC 4 Make any needed adjustments to the Accents and reference marks.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 6** Remove one of the Accents. Rub the backing on the adhesive strip to activate the adhesive. Remove the adhesive backing. Using the reference marks made in Step 4, press the Fender Accent into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. PIC 4 Repeat for the other fender.

**NOTE:** If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.

