



**ACCENTS for H-D TRIKE REAR BUMPER 7223**

**PARTS INCLUDED**

- 1 Right Bracket Cover
- 1 Left Bracket Cover
- 1 Hardware Kit Containing:
  - 2 Clamps
  - 4 #8-32 Nylock Nuts
  - 4 #8 Flat Washers
  - 4 #8-32 X 1" Socket Head Cap Screws
  - 1 Alcohol Pad
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

**TOOLS SUGGESTED**


Set of Hex Wrenches, Cleaning Supplies

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

<b>WARNING</b>	<b>YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.</b>
----------------	---


**STEP 2** Determine the left from the right (sitting on Trike) Bumper Accents. PIC 1 They are marked on the end of each Accent.

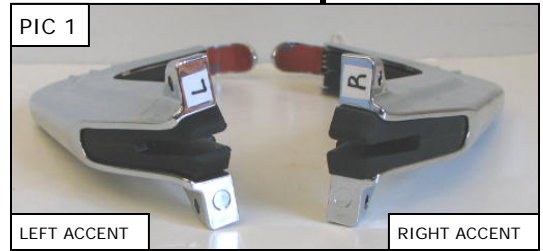

**STEP 3** Thoroughly clean the round portion of the bumper above the location of each mount (PIC 2) with soapy water and a clean rag. Rinse and dry completely. Wipe the installation area with the included alcohol pad to remove any residue. Dry completely.

**NOTICE** Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.


**NOTICE** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

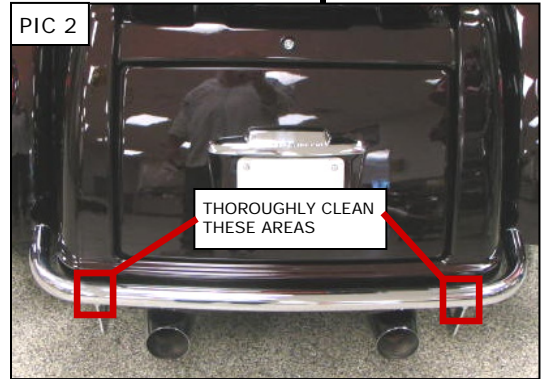

**STEP 4** Test fit the left Accent to the left bumper mount. Make any reference marks with masking tape or a non-permanent marker.

**NOTE:** For the following Step, spraying a little window cleaner or soapy water in the bottom of the rubber channel of the Accent will help it slide on easier.

**STEP 5** Rub the backing paper of the adhesive in the hook of the left Accent with your fingernail. Remove the backing. Insert the rib of the bumper mount into the channel in the left Accent and slide it forward, making sure the rib is firmly in the channel and using any reference marks made in Step 4, until the adhesive on the hook contacts the round portion of the bumper. Press in place for one minute. Full bonding will occur in 24 hours.

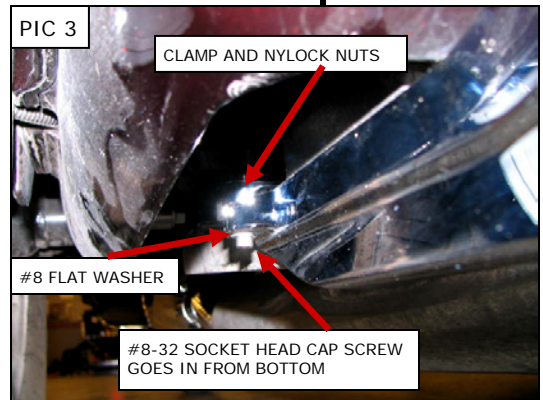

**STEP 6** Press one of the included #8-32 nylock nuts into each hex recess in one of the clamps. If the nylock nuts fit loosely in the hex recess, place a piece of tape over them.

**STEP 7** Place the clamp over the top of the bumper mount and using two of the included #8-32 X 1" socket head cap screws and #8 flat washers, loosely attach the clamp to the Accent. PIC 3 Place a finger over the nylock nut in the clamp and tighten the socket head cap screw until you can feel the threads starting to protrude through the nut. Check the Accent, if it is tight and doesn't move, do not tighten further. If the Accent still has movement, tighten the socket head cap screw a little at a time until there is no movement in the Accent. **DO NOT OVER-TIGHTEN!**

**STEP 8** Repeat Steps 3 through 7 for the right side.

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

*Ride On!*