



DELUXE TRI-LINE STEREO TRIM for '14-UP TOURING 7240

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Deluxe Tri-Line Stereo Trim — Center
- 1 Right Stereo Trim
- 1 Left Stereo Trim
- 1 Alcohol Pad
- 1 Installation instructions

TOOLS SUGGESTED:

Warm soapy water and a clean rag

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.


- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTICE

Ensure proper adhesion of this product. Clean the installation area of grease, oil, bugs, dirt and other debris (including wax and polish). Kuryakyn WILL NOT issue a warranty for any improperly installed products.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.

- STEP 2** Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation areas; allow the area to dry completely. Wipe the installation areas with the included alcohol pad to remove any wax or polish; allow the area to dry completely.

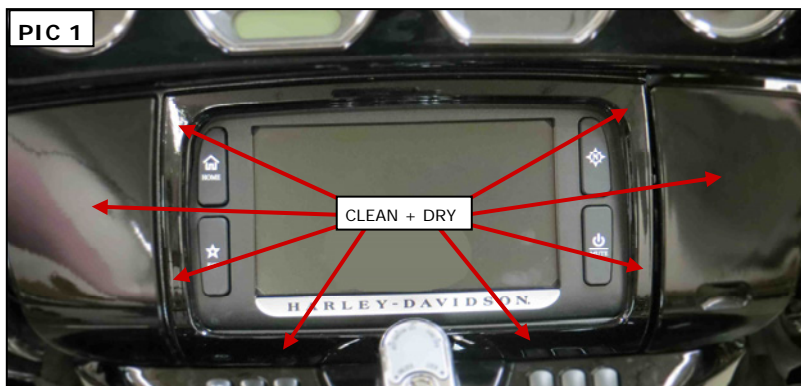

-cont.-

STEP 3 Test fit the Center Tri-Line Stereo Trim as shown in **PIC 2**. Note how the adhesive tape is on the sides of the Trim. Remove the Stereo Trim when you are comfortable with the test fit.

STEP 4 Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

STEP 5 Slide the Trim **DOWN** passed the ignition switch; align the Trim on the fairing and press it **UP** into place for one minute; full bonding will occur after 24 hours.

NOTE: Ensure that the Trim is positioned as far up as possible, maintaining a good fit, to enable installation of Kuryakyn P/N 7283 Chrome Switch Panel Accent (sold separately).

STEP 6 Test fit the Left Stereo Trim as shown in **PIC 3**. Note the gap between the Center Trim and Left Trim and how it fits on the panel.

STEP 7 Test fit the Right Stereo Trim as shown in **PIC 4**. When aligning the Trim, keep in mind that the media compartment door moves around and may not be an exact fit or align perfectly when released. Ensure that the Trim will not interfere with the compartment door operation.

STEP 8 Use your fingernail to rub the adhesive backing on the Trim pieces; this will activate the adhesive. Remove and discard the backing.

STEP 9 Align the Left Trim on the fairing. Press it into place for one minute; full bonding will occur after 24 hours.

STEP 10 Repeat **STEP 9** for the Right Trim.

NOTE: If the bike is going to be operated before full bonding occurs, secure the Trim to the fairing with a good quality masking or painter's tape.

