



SLOTTED SPARK PLUG COVERS

7260

PARTS INCLUDED

- 1 Front Slotted Spark Plug Cover—Chrome
- 1 Rear Slotted Spark Plug Cover—Chrome
- 1 Hardware Kit Containing:
 - 4 Mounting Caps
 - 4 #10-32 X 3/8" Socket Head Cap Screws
 - 8 #10-32 X 1/4" Set Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.



This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.



IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1


Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.




YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-

STEP 2 Determine the Front from the Rear Slotted Spark Plug Cover. PIC 1 The covers are marked front and rear on the underside.

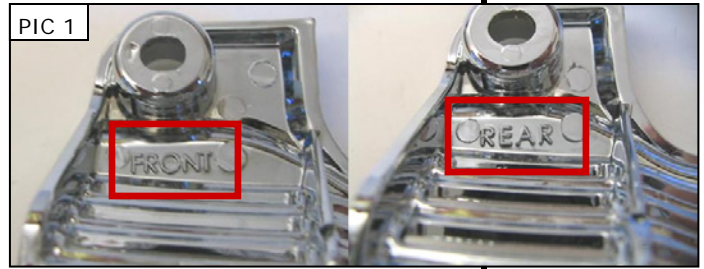

STEP 3 Loosely install two of the included set screws into each of the mounting caps. Install one of the mounting caps to each headbolt. PIC 2 Pushing down on the mounting caps to hold them tight against the headbolts, tighten securely.

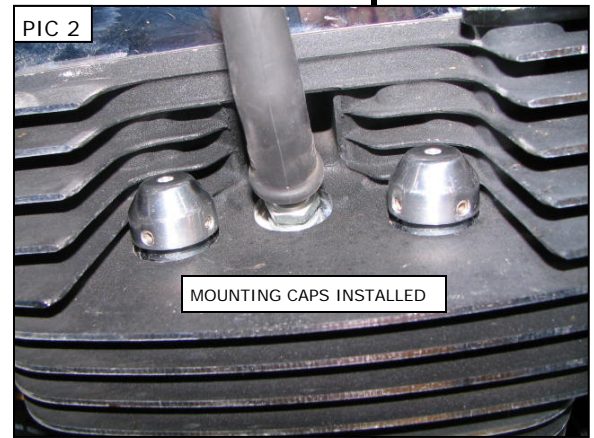

STEP 4 Place the Slotted Spark Plug cover marked "front" over the mounting caps attached to the front headbolts. Insert one of the socket head cap screws through each of the two holes in the top of the Cover and thread it into the threaded hole in top of the mounting cap loosely. PIC 3



STEP 5 Holding the Cover centered in the spark plug opening and sitting level to the head, tighten the cap screws securely. PIC 4

STEP 6 Repeat Steps 4 and 5 for the rear Cover.

CAUTION Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

