



TRIKE TRUNK ACCENTS

7274

PARTS INCLUDED

- 1 Left Trunk Accent
- 1 Right Trunk Accent
- 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

<b>NOTICE</b>	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
---------------	---

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

TOOLS SUGGESTED


Cleaning Supplies, Masking Tape, Non-Permanent Marker

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Determine the Left from the Right (sitting on Trike) side Accent. PIC 1

**STEP 3** Thoroughly clean both sides of the trunk with soapy water and a clean rag. Rinse and dry completely. Wipe each side with one of the included alcohol pads to remove any residue. Dry completely. PIC 2

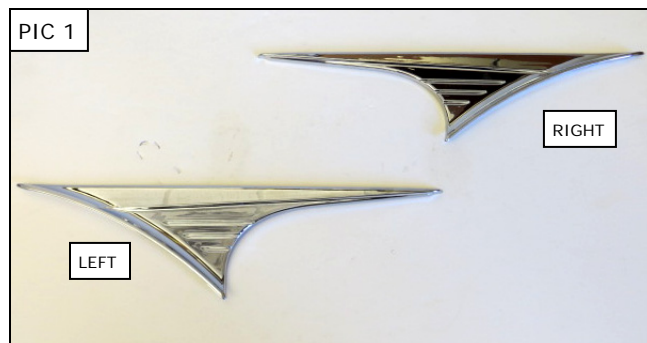

-cont.-

**NOTICE**

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 4**

Test fit the Right Accent to the Right side of the trunk. The rounded edge of the Accent will fit up to the curve between the rear fender and trike body area shown in PIC 2 and PIC 3. Make any necessary reference marks with masking tape or a non-permanent marker.

**NOTICE**

The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.



**STEP 5**

Rub the backing of the adhesive with your fingernail to activate the adhesive. Remove the backing. Using any reference marks made in Step 4, attach the Accent to the right side. PIC 4 Press in place for one minute. Full bonding will occur in 24 hours.

**NOTE:** If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.

**STEP 6**

Repeat Steps 4 and 5 for the left side.

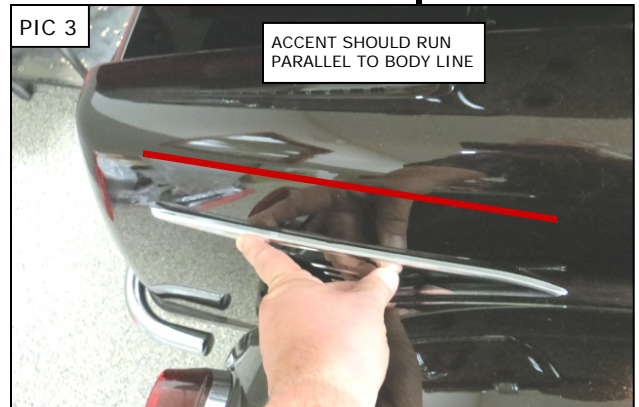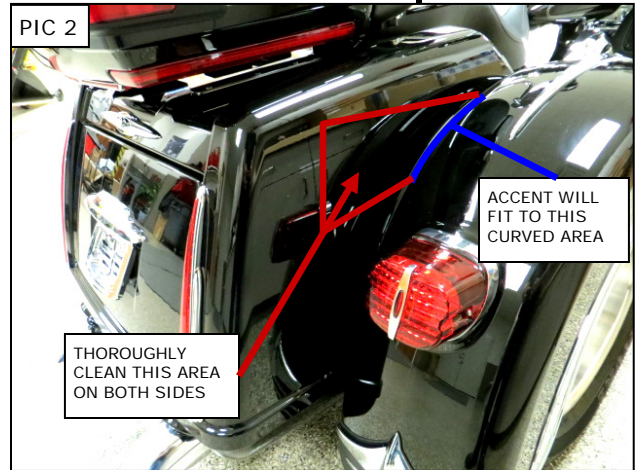

*Ride On!*