



## HEADLIGHT TRIM RING—BLACK

7276

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

### WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

### CAUTION

This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

### NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Headlight Trim Ring—Black
- 1 Hardware Kit Containing:
  - 1 M4 X 0.7 x 35mm Phillips Pan Head Screw
  - 1 M4 X 0.7 Custom Nut
- 1 Installation Instructions

### TOOLS SUGGESTED

Phillips Head Screwdriver

### NOTICE

If installing this product for another party, please make sure they receive this copy of the installation instructions so they are aware of the important information contained in them.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

### NOTICE


Avoid damage to the motorcycle. Protect painted surfaces with a service cover or soft, clean towel.

**NOTE:** Pictures shown are of chrome parts. Installation of Black parts will be the same.

- STEP 2** Hook the inner lip of the new Trim Ring in the groove between the OEM trim ring and the fairing or nacelle. PIC 1

- STEP 4** Spread the new Trim Ring apart a bit and push it into place as you move around the headlight. PIC 1

-cont.-

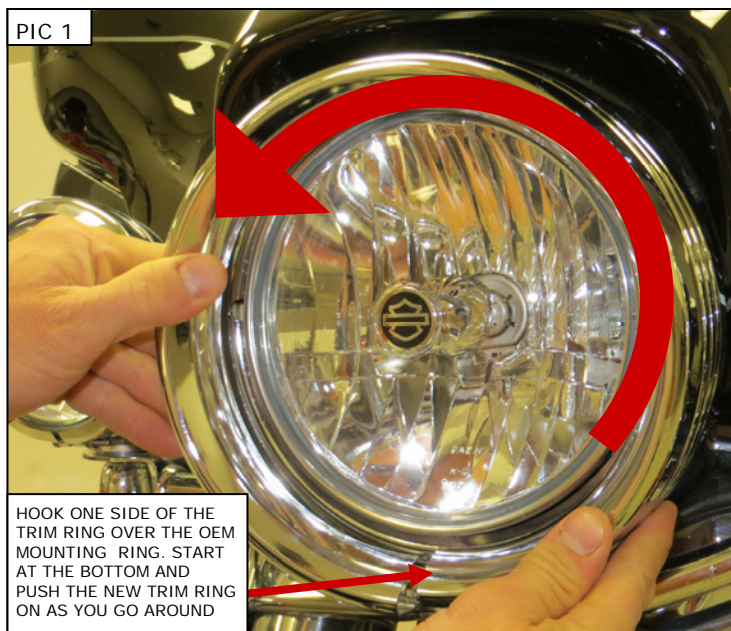

PIC 1  
HOOK ONE SIDE OF THE TRIM RING OVER THE OEM MOUNTING RING. START AT THE BOTTOM AND PUSH THE NEW TRIM RING ON AS YOU GO AROUND

**STEP 5** Install the included pan head screw through the holes in the bottom of the trim ring. PIC 2

**STEP 6** Install the custom nut on the pan head screw. Align the seam at the bottom, then tighten the screw. PIC 2

**NOTE:** Do not over tighten the screw.

**TIPS FOR PROPER CARE:**

Clean often with mild soap and water and a soft cloth.

Rinse with fresh, clean water then dry with a soft cloth.

Only use polishes recommended for painted automotive-type surfaces.

Stay away from abrasive polishes.

Do not over-polish the part.

*Ride On!*



PIC 2  
ALIGN THE SEAM

SECURE THE TRIM RING WITH THE PAN HEAD SCREW AND CUSTOM NUT. DO NOT OVER TIGHTEN THE NUT