



SWITCH PANEL ACCENT FOR '14-UP TOURING — BLACK

7278

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Switch Panel Accent
- 1 Alcohol Pad
- 1 Installation instructions

CHROME OR BLACK, INSTALLATION IS THE SAME

TOOLS SUGGESTED:

Warm soapy water and a clean rag

- STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTICE

Ensure proper adhesion of this product. Clean the installation area of grease, oil, bugs, dirt and other debris (including wax and polish). Kuryakyn WILL NOT issue a warranty for any improperly installed products.


Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.

- STEP 2 Refer to PIC 1. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area (in yellow); allow the area to dry completely. Wipe the installation area with the included alcohol pad to remove any wax or polish; allow the area to dry completely.

- STEP 3 Test fit the Accent on the area shown in PIC 1.

- STEP 4 Remove the Accent; use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing.

- STEP 5 Align the Accent on the fairing. Press it into place for one minute; full bonding will occur after 24 hours. Ensure proper operation of any switches and ignition switch BEFORE operating the motorcycle.

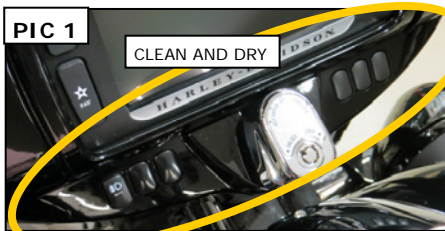

NOTE: If the bike is going to be operated before full bonding occurs, secure the Accent to the fairing with a good quality masking or painter's tape.

NOTICE

Clean Accent regularly with warm soapy water and a soft rag. Rinse thoroughly with clean water. Avoid using harsh chemicals to clean the Accent.

Ride On!