



DECO EAGLE FENDER ORNAMENT

7333

PARTS INCLUDED

- 1 Deco Eagle Fender Ornament
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


STEP 2 Remove any grease or debris from the installation area with soapy water and a clean rag; rinse and allow the area to dry completely. PIC 1 Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F. Rub the backing on the adhesive strip to activate the adhesive before applying.

ATTENTION! Fully compress the front fork and ensure there is no contact between the fairing and the Deco Eagle.

STEP 3 Test fit the Deco Eagle to the front fender. Make sure that the Deco Eagle is placed forward far enough on the fender so it does not hit the fairing, light bar or bottom triple tree when the suspension is fully compressed. Make any reference marks with a non-permanent marker or masking tape. Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the adhesive backing. Press the Deco Eagle into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. PIC 2

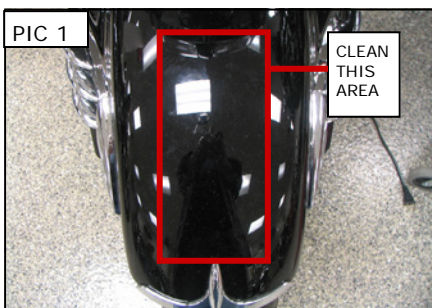

Ride On!

Discover various motorcycle custom accessories and trim in our online store.