

INSTALLATION INSTRUCTIONS

MUFFLER BRACKET COVER, SATIN BLACK

7367

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|-----------------------|---|---------------------------|
| 2 | Muffler Bracket Cover | 1 | Hardware Kit, containing: |
| | | 4 | 5/16" Flat Washers |

YOU WILL ALSO NEED:

Socket Wrench Set, Ratchet, and Combo Wrench Set

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

WARNING YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove saddlebags from the motorcycle.

STEP 3 Refer to PIC 1. Remove the OEM fasteners that secure the muffler to the mount. Set hardware aside, they will be reused.

Note: Lightly loosen the exhaust system to allow a little extra flexibility while working on the installation of the muffler bracket covers.

STEP 4 Refer to PIC 2 and 3. Test fit the Muffler Bracket Cover to each muffler. The cover will fit between the hanger bracket and the brackets on the muffler. If there is any contact between the muffler and the lower edge of the Muffler Bracket Cover, proceed to Step 5. If there is no contact, proceed to Step 7.

Note: You may need to apply slight downward pressure on the muffler to get the cover in place between the upper hanger plate and the mounting brackets on the muffler.

Note: Refer to PIC 4. The side with the notch goes on the inside edge of the muffler (facing towards the bike).

CAUTION IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT THERE IS ADEQUATE CLEARANCE BETWEEN THE MUFFLER BRACKET COVER AND THE MUFFLER. KURYAKYN IS NOT RESPONSIBLE FOR ANY DAMAGE DUE TO INADEQUATE CLEARANCE.




INSTALLATION INSTRUCTIONS

MUFFLER BRACKET COVER, SATIN BLACK

7367

-CONTINUED-

- STEP 5** Refer to PIC 4. On the under side of the covers, place one of the included 5/16" flat washers over each of the mounting holes. Use a piece of tape or drop of silicone on each side of the washers to hold them in place.

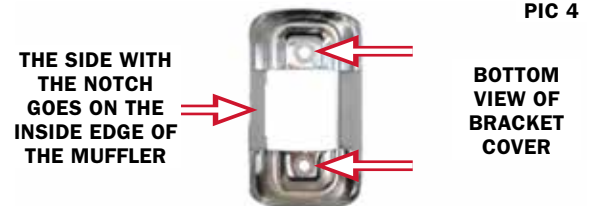

- STEP 6** Refer to PIC 5. Install the covers over the muffler brackets.

Note: You may need to apply slight downward pressure on the muffler to get the cover in place between the upper hanger plate and the mounting brackets on the muffler.

- STEP 7** Refer to PIC 5. Install the OEM fasteners and flat washers through the hanger and the Muffler Bracket Cover into the muffler bracket. Tighten securely.



- STEP 8** Repeat for the other side.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

